

Cash Drawer User Guide

I . Technical Specifications

Electrical Specifications:

1. Magnetic Coil Input Signal:

 

Pulse Amplitude: 12V DC; 24V DC Pulse Width: 80ms~200ms
Pulse Duty Factor: 10%(max) Peak Current: $\leq 1.85A$

II . Installation

1. Take out the Cash Drawer from Packing Box
2. Take out the key from Plastic Bag
3. Put the Box in a position as level as possible. (If the Back level is higher than Front, due to gravity, the box is easy to be damaged as larger Pop-up Power; If the Front level is higher than Back, the gravity will cause the Pop-up blocked, which impact the operational efficiency.)
4. Connect the Box Cable Plug with the corresponding interface of Mainboard or Printer.

III. Lock Operation

The Cash Drawer with Three Positions, as shown in the following pictures:

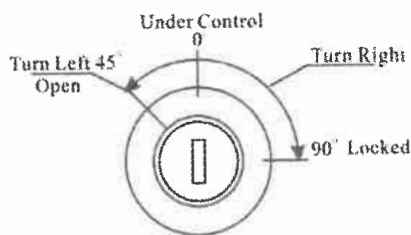

Lock Status: Open with the key only, electric or manual without key cannot work
Open Status: When Drawer kept in Open Status, Closing is not allowed.
Under Control Status: Opening controlled by connected mainboard or Printer.

Pin	Define
2 、 4	Cash Box-drive Pulse

IV. Packing List

Cash Drawer: One Set
Instruction: One Page

Key: 2 Pieces
Interface Cable: One Cable