

## RF Wireless Touching LED Remote Controller

( Both Color temperature and Brightness Adjusting)

Model No.: FUT022

### 1. Technical Parameters(remote control):

- 1:Power supply: AAA battery \* 2 pcs
- 2:Cover material:ABS

### 2. Technical Parameters(controller):

1. Working voltage:DC12V-24V
2. Output control: 2 channels
3. Control current: 6A/channel
4. Total output: Max. 10A
5. Connecting method: common anode
6. Dimension: L85\*W45\*H22mm
7. Receiving range:30meters

### 3. Functions of Keys

1. Key 1:on
2. Key 2:off
3. Key 3:highest brightness
4. Key 4:medium brightness
5. Key 5:lowest brightness

### 4. How to use

1.Brightness Adjusting :Use your finger to touch the left half part of color ring ,you can change the brightness from the highest to the lowest(100%-1%,20 grades of Brightness to adjust) .

2.Color temperature Adjusting: Use your finger to touch the right half part of color ring,you can adjust the temperature from warm white to cool white(11 grades to adjust).

3.Resume fuction. The previous settings will be resumed while power on again.

4.Matching code

Press Key 3 once within 3 seconds when power on again,the light will blink 3 times if matching is successful.



5.Clearing Code

Press Key 3 five times within 3 seconds when power on again,the light will blink 6 times if clearing is successful.

### 5. Caution:

Please don't touch or press the color ring while loading the batteries to protect the sensitiveness. Please use the remote controller 3 seconds after the batteries are loaded. Please reload the batteries when you find the color ring is not sensitive.

### 6. Connecting Chart

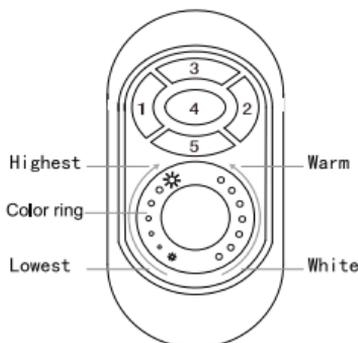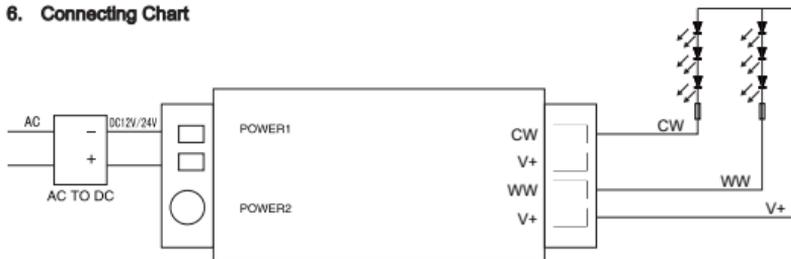

www.futlight.com

Made in China

