


# CLICK-V TOP 1430x2020

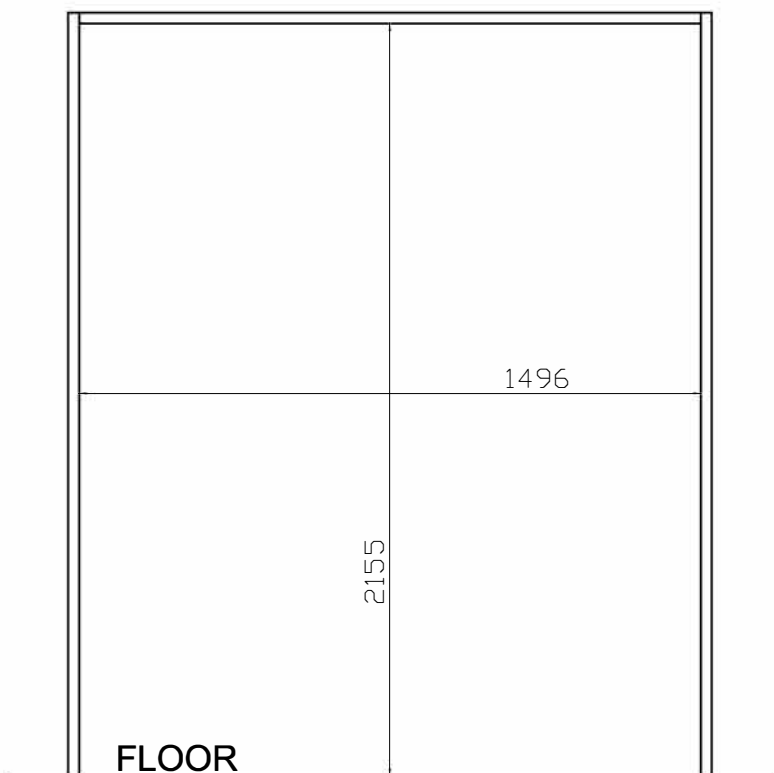

## **CABINET DIMENSIONS:**

INTERNAL WIDE 1496mm

HEIGHT FROM THE FLOOR 2155mm

BASAMENT HEIGHT MAX 30mm

if you change basament dimension you have to change door size and holes (\*)

## **EXAMPLE:**


BASAMENT HEIGHT 30mm

DOOR DIMENSION 1470x2105

## **DEPTH CABINET:**

**THICKNESS DOOR + 280mm +  
THICKNESS BACK PANEL**

## **HOLES FOR RIGHT AND LEFT SIDE**

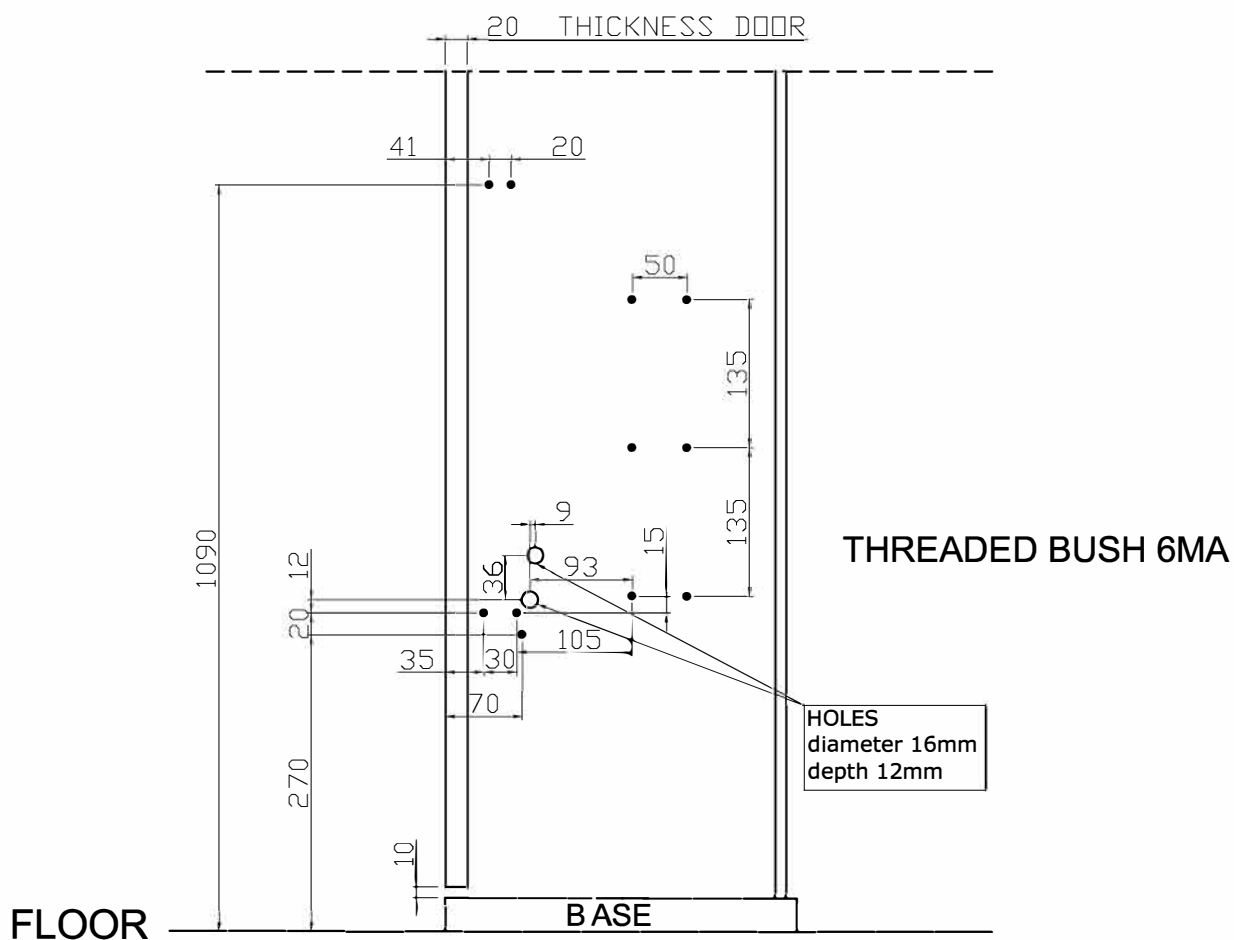

## **FRONT PANEL + MATTRESS**


**WEIGHT 70 Kg**

**HEIGHT MATTRESS 180mm**



# PROCESSING NECESSARY ON THE WOOD PANEL

DIMENSION =


1080 DETRACT DIMENSION BASE CABINET

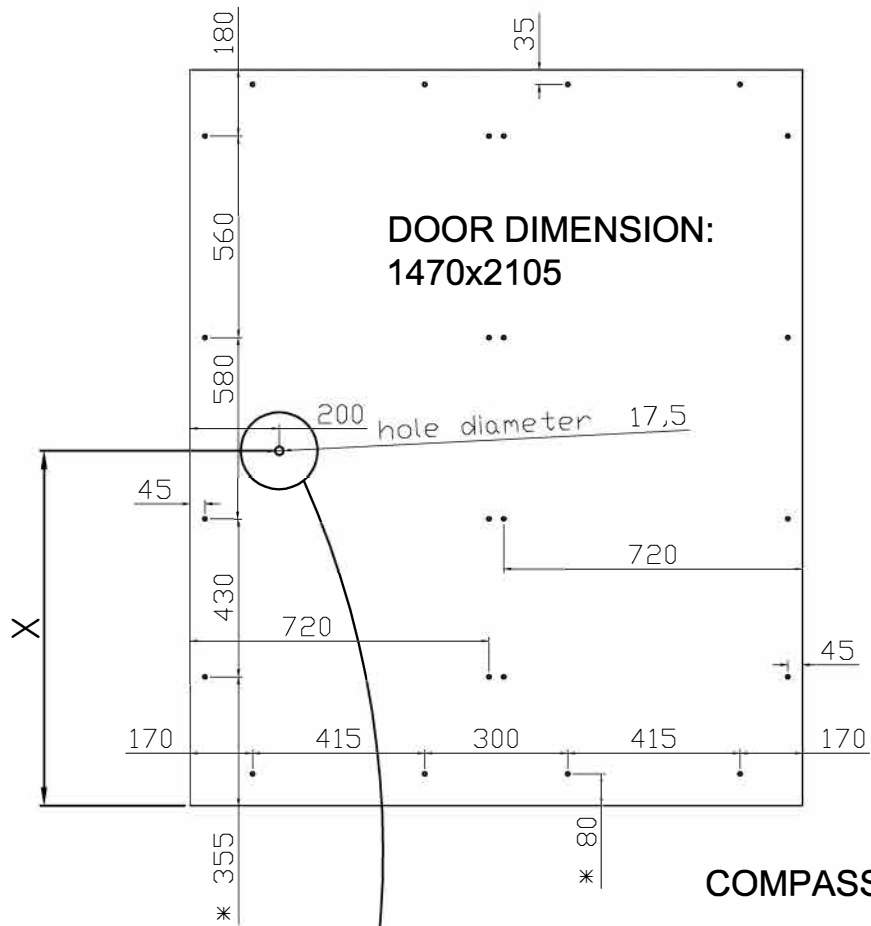



COMPASS 6MA

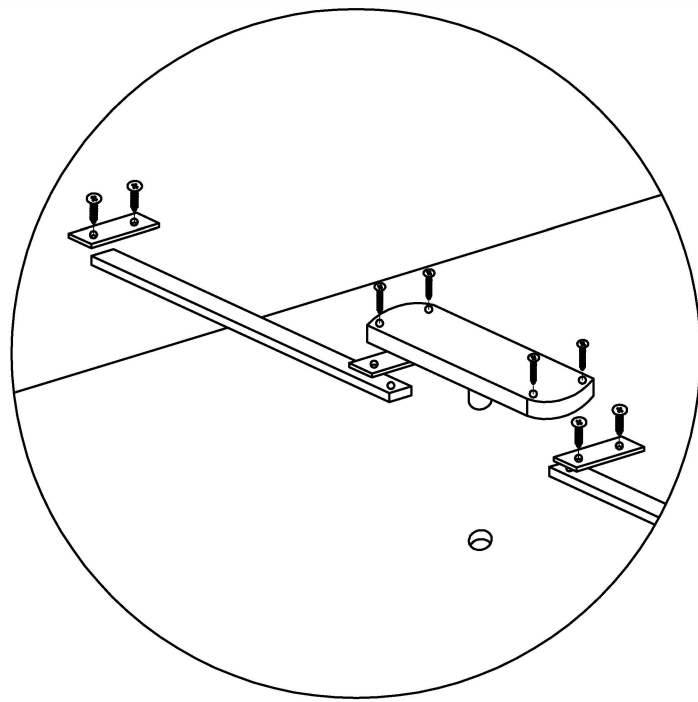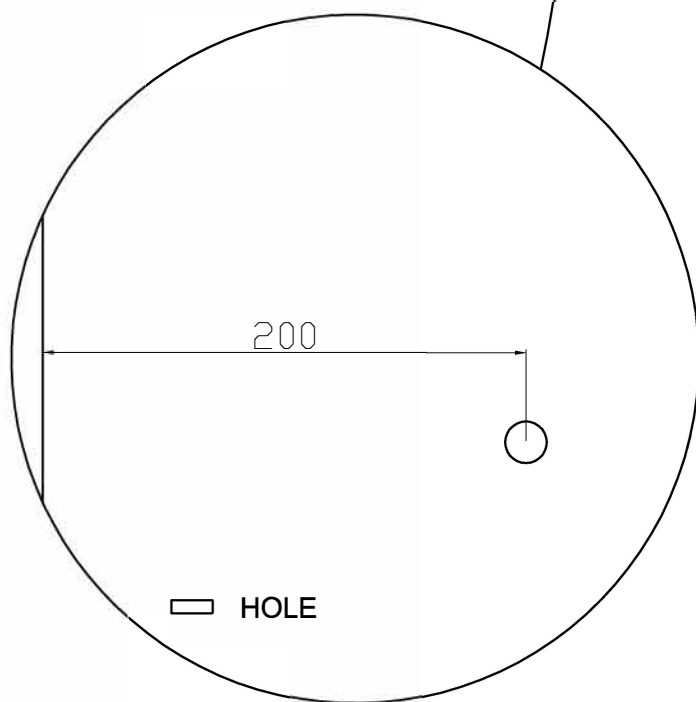

# HOLES AND DIMENSIONS FOR THE TABLE PANEL

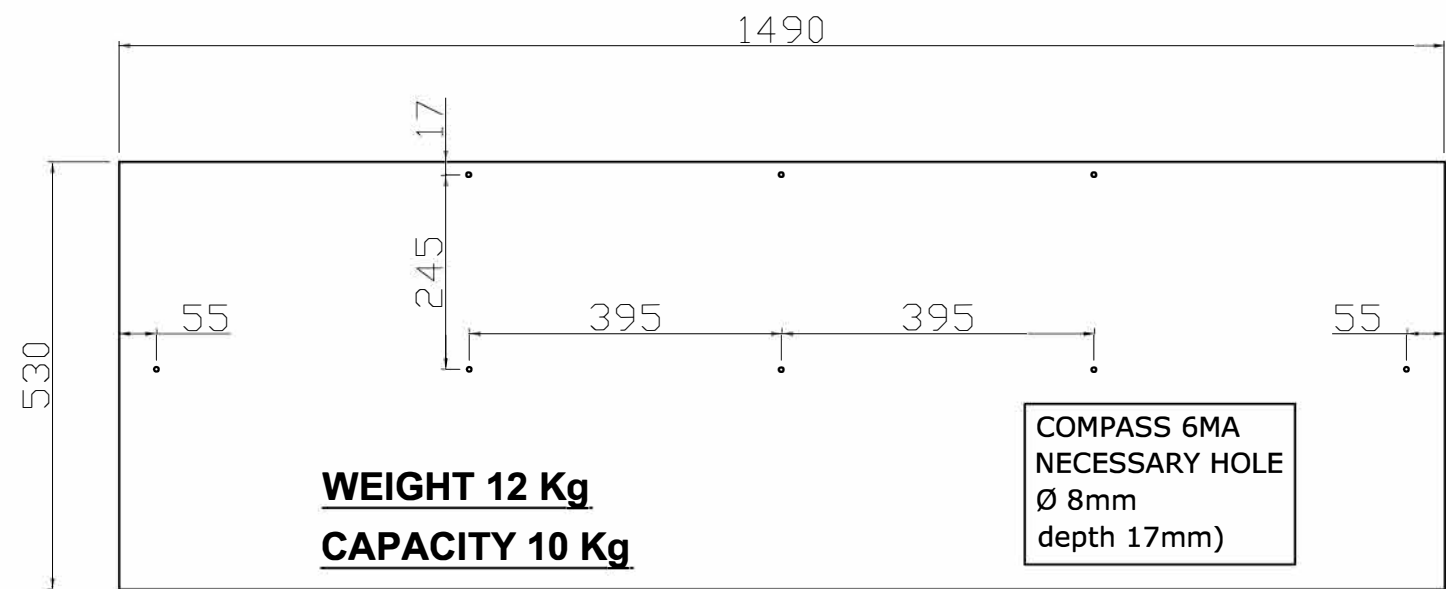

# HOLES AND DIMENSIONS FOR THE SHELF PANEL

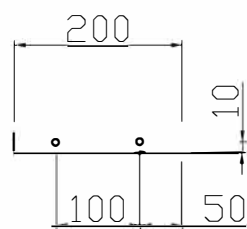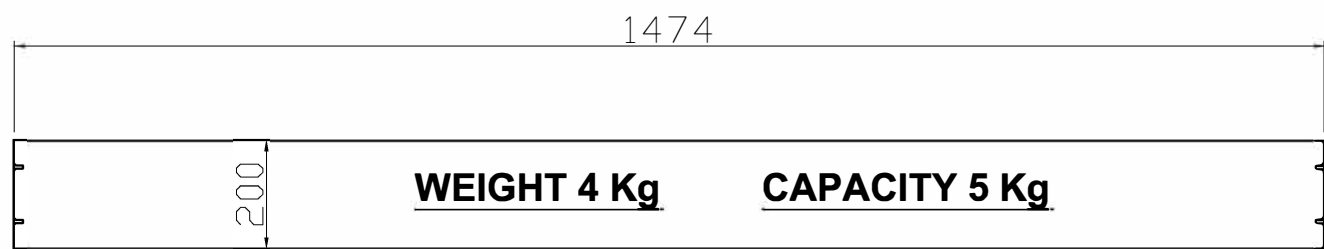

**COMPASS 6MA**  
**NECESSARY HOLE**  
 $\varnothing$  8mm  
depth 17mm)