


# ART. CLICK-O

SINGOLO / SINGLE

## MONTAGGIO - MOUNTING

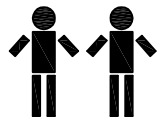


Assicuratevi di aver fissato il vostro mobile alla parete contro il ribaltamento, poichè le pareti sono di materiali diversi il fissaggio alla parete non è incluso


Make sure to fix your cabinet to the wall.

As wall materials vary, plates and screws for fixing to wall are not included.


1

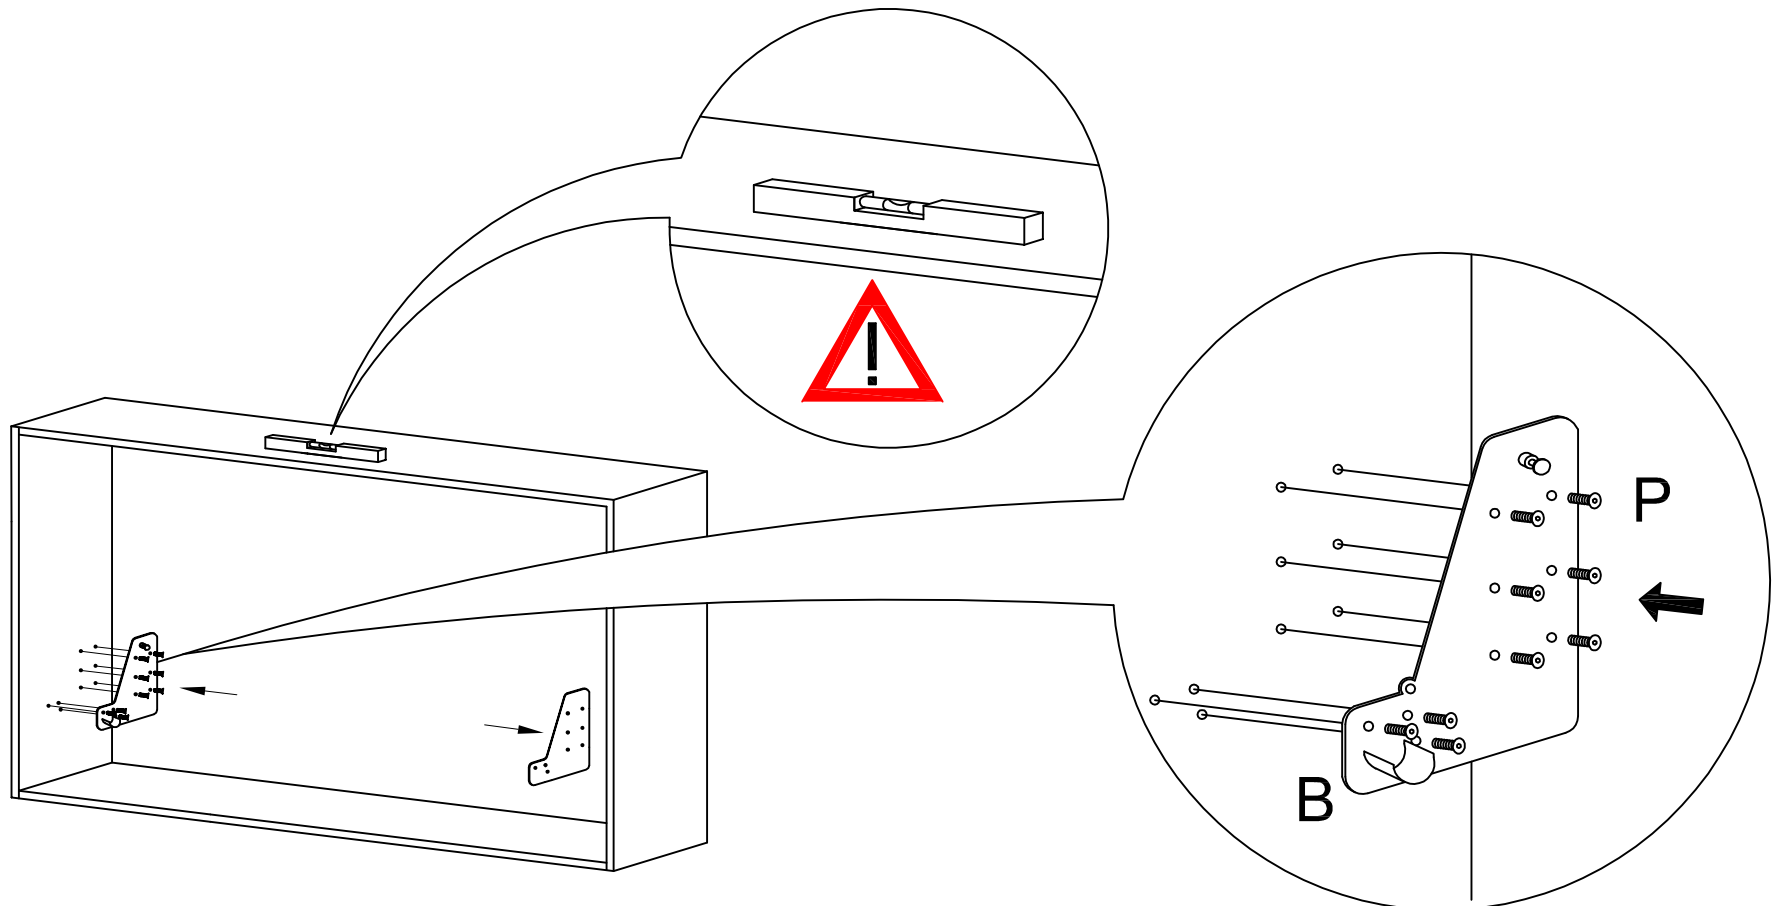


2

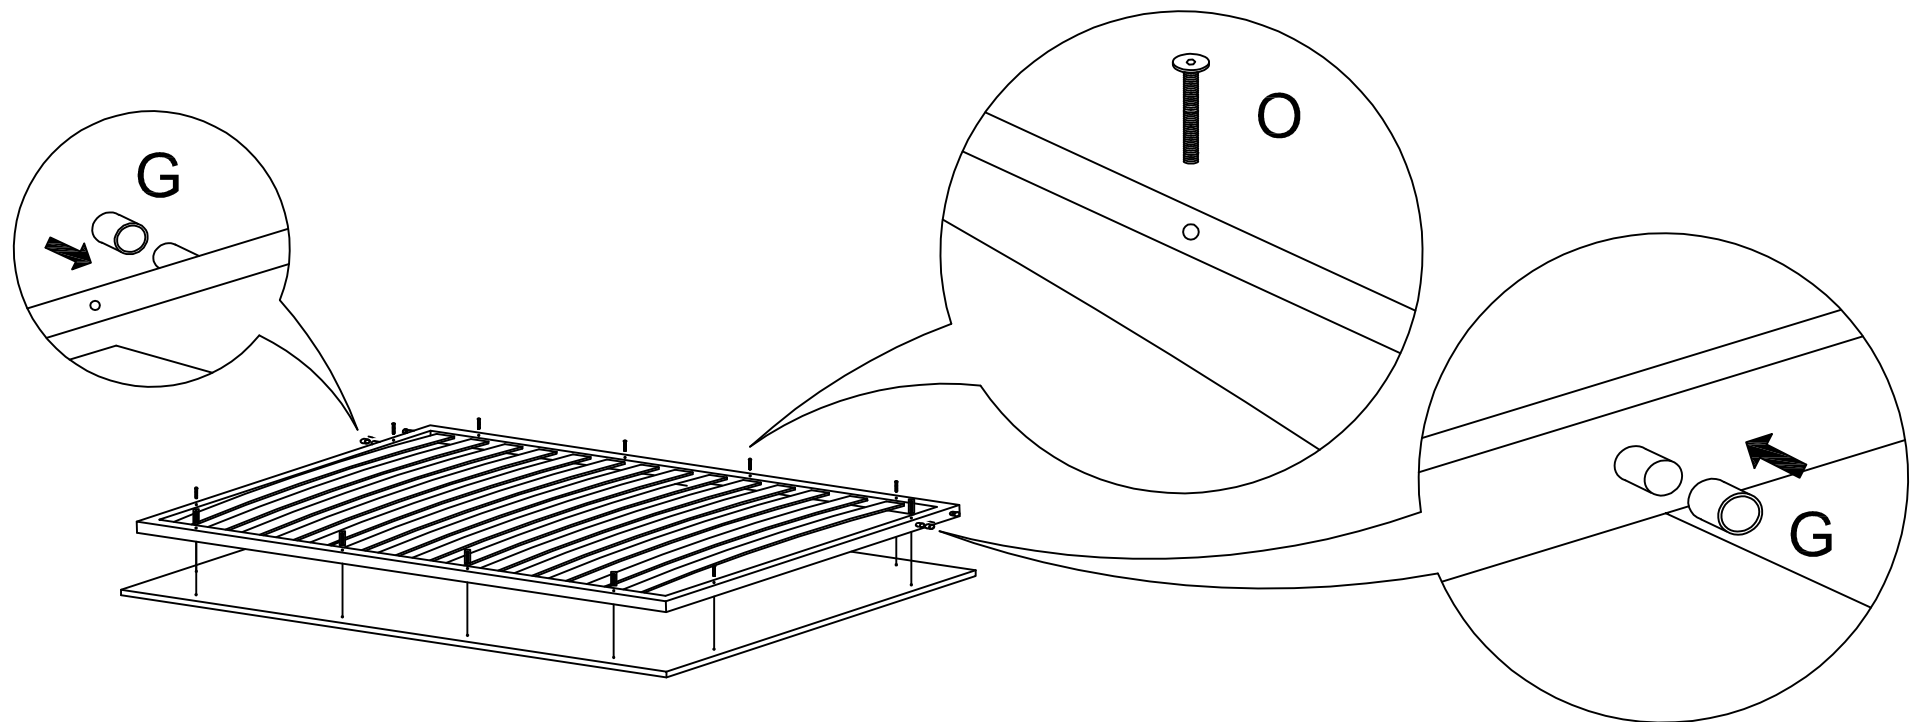


3

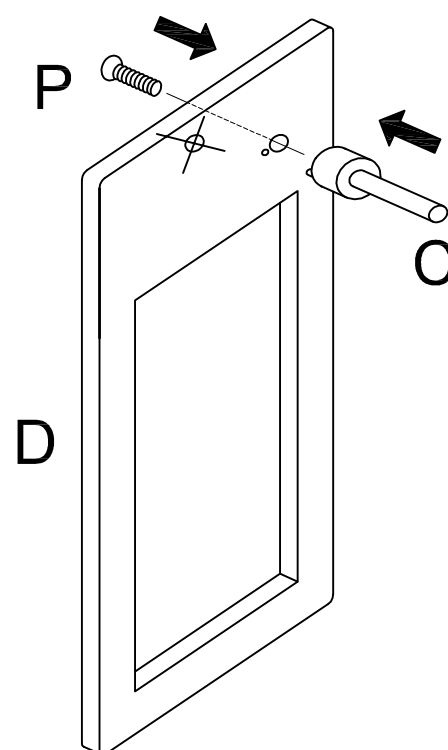


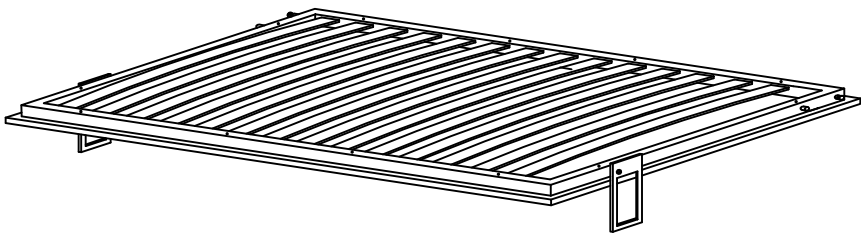



4

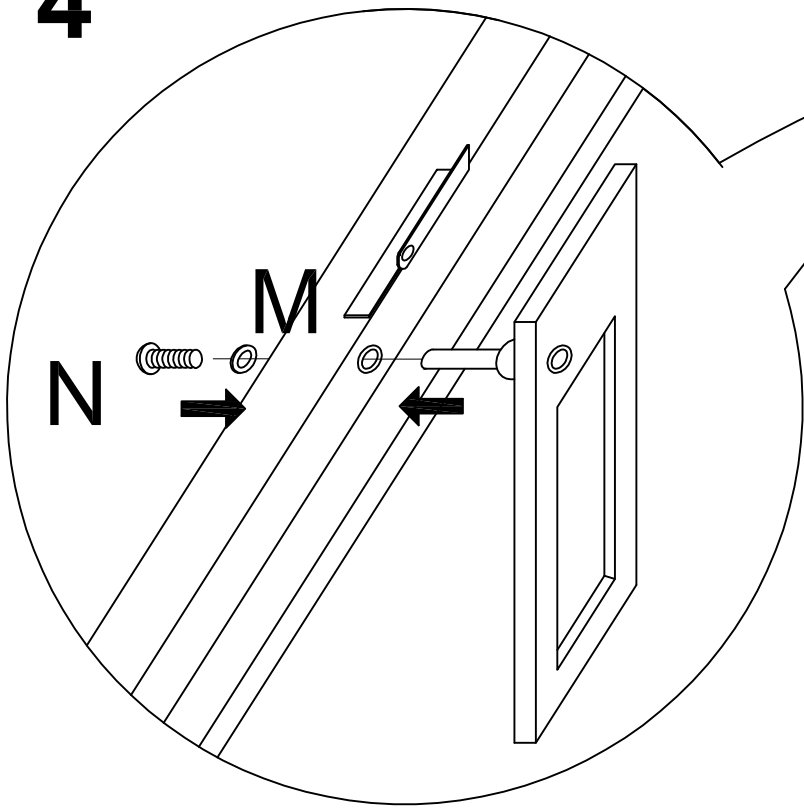



5

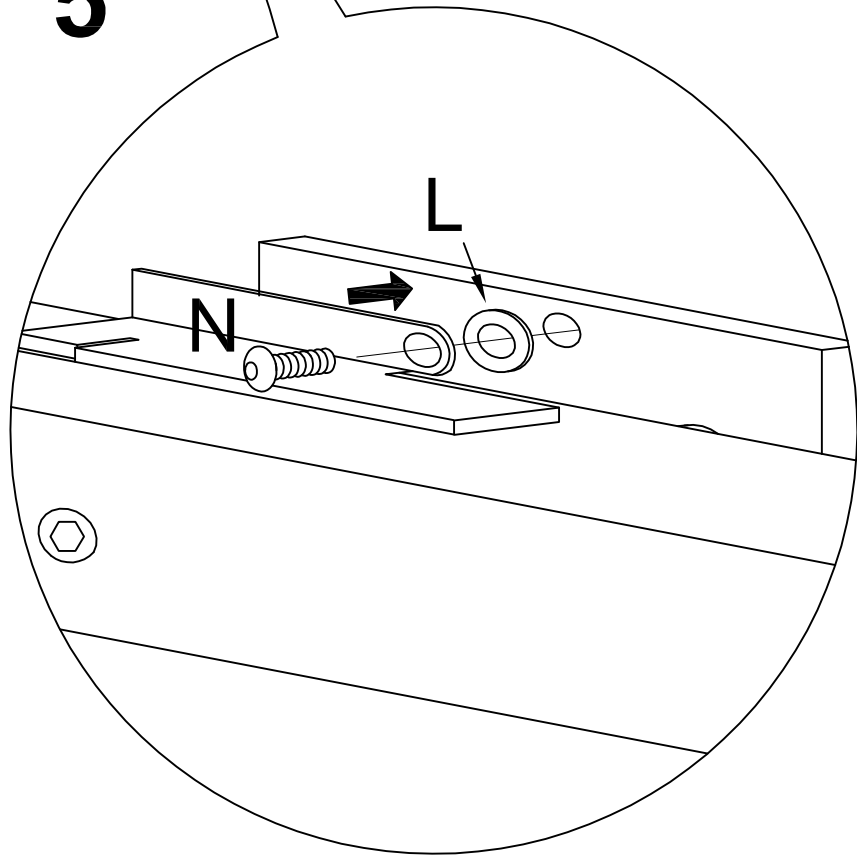



6

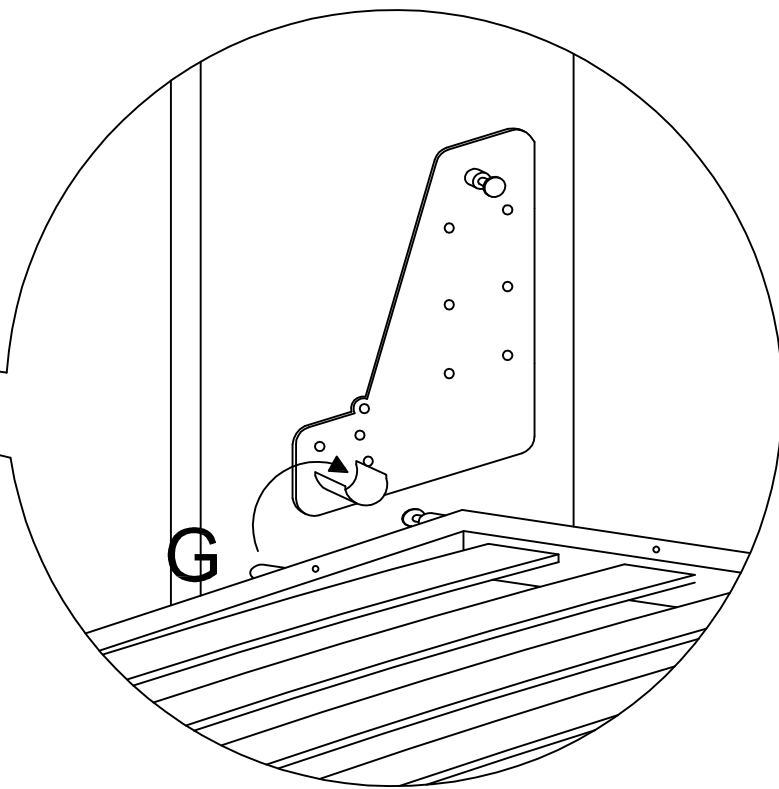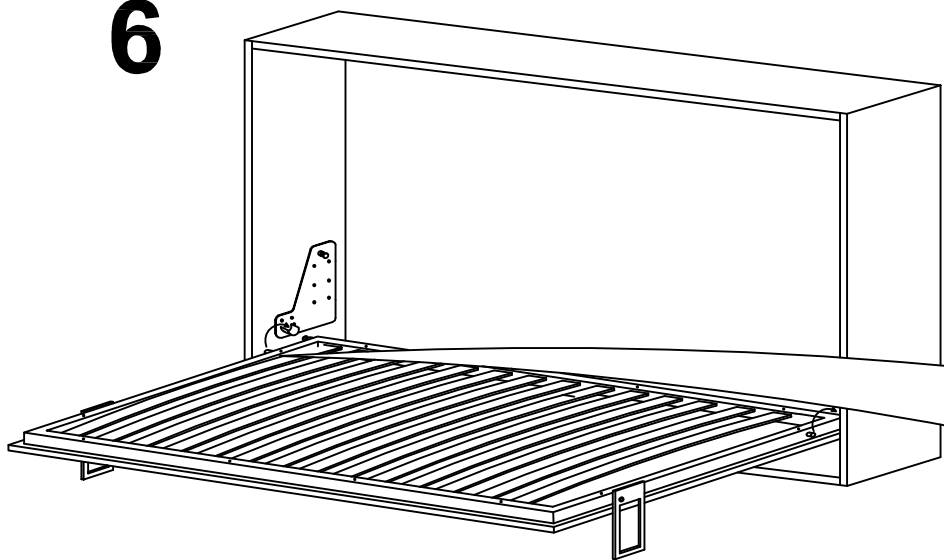



7

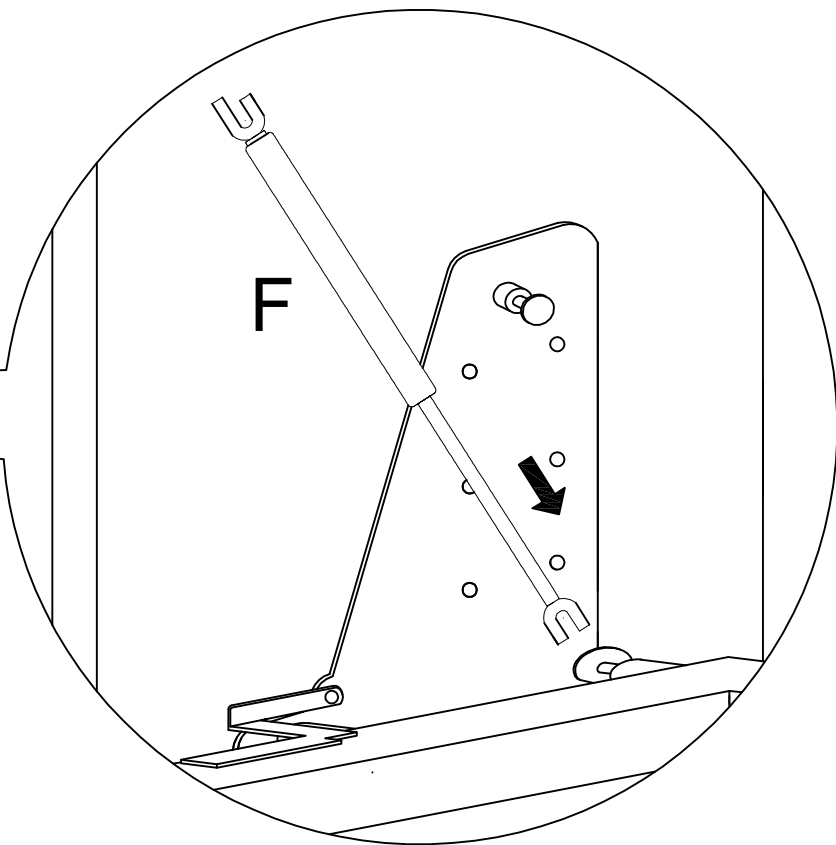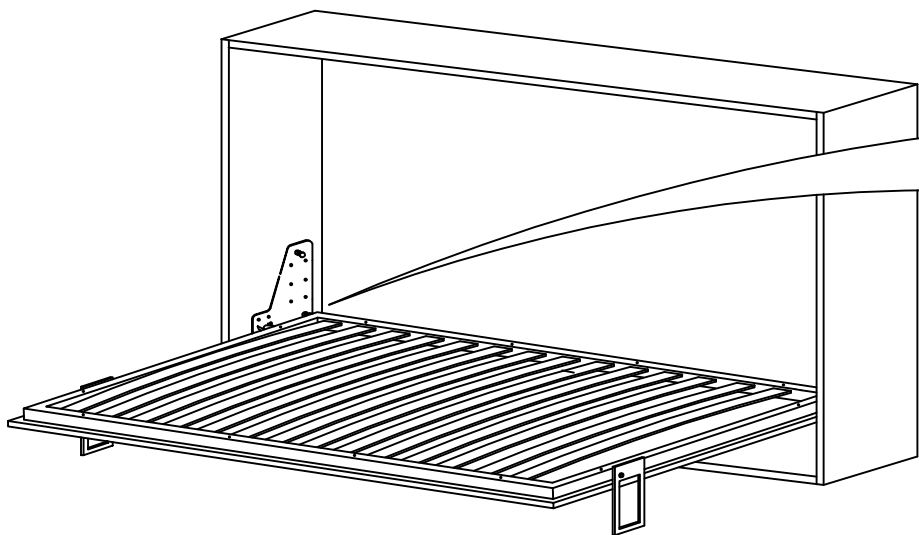


8

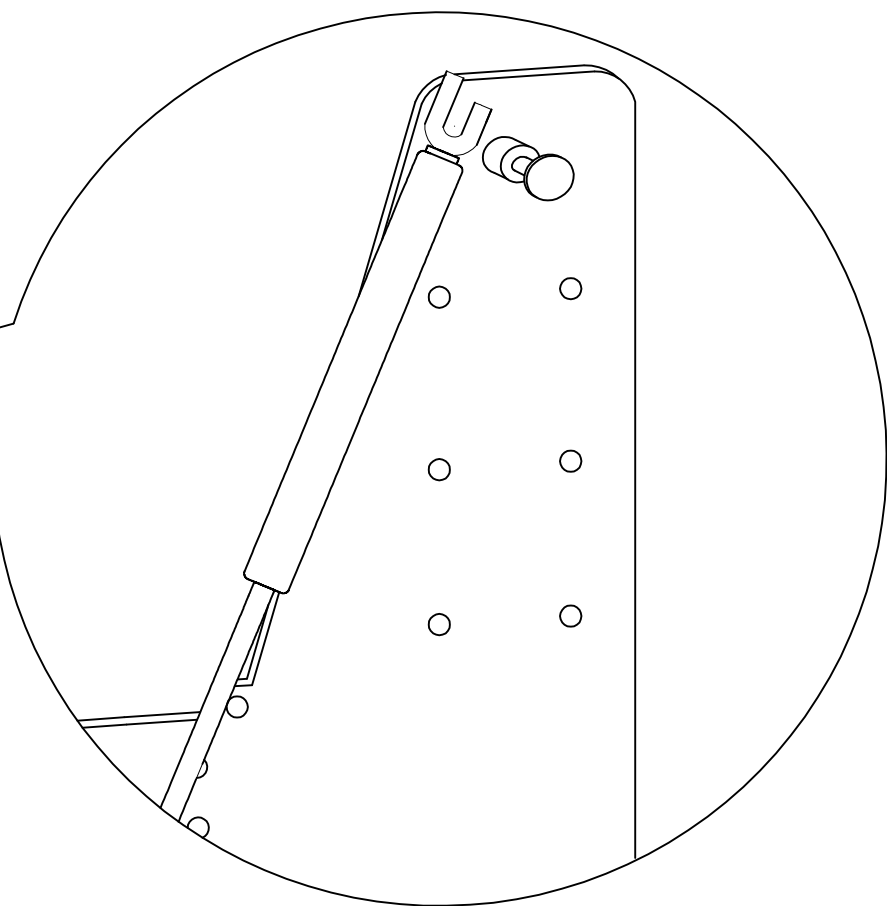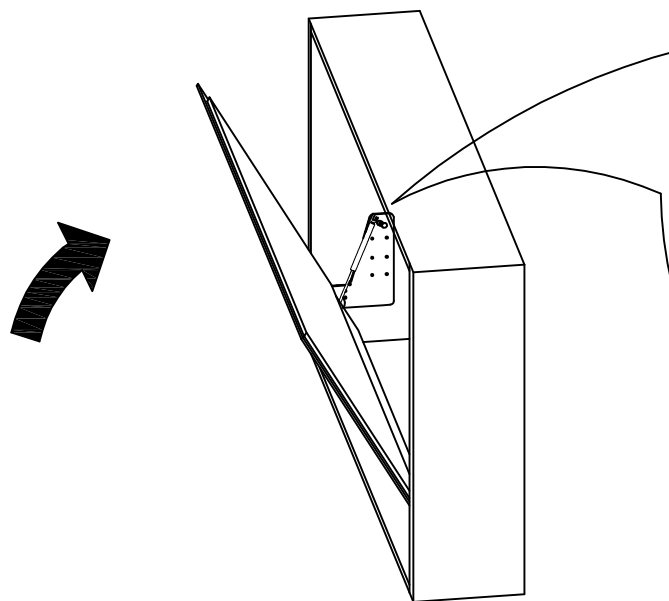


9

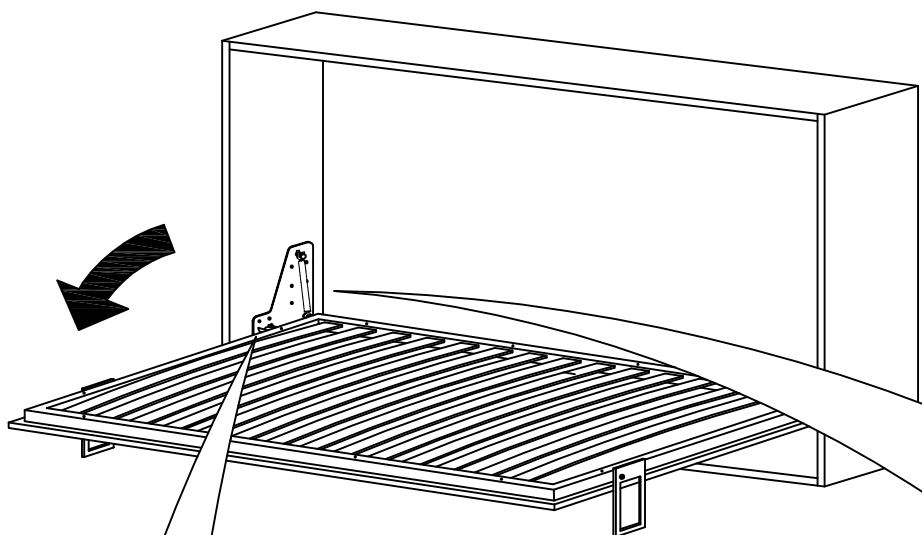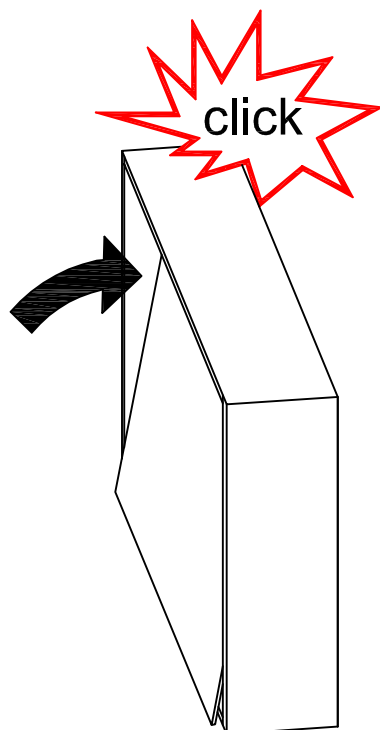




10

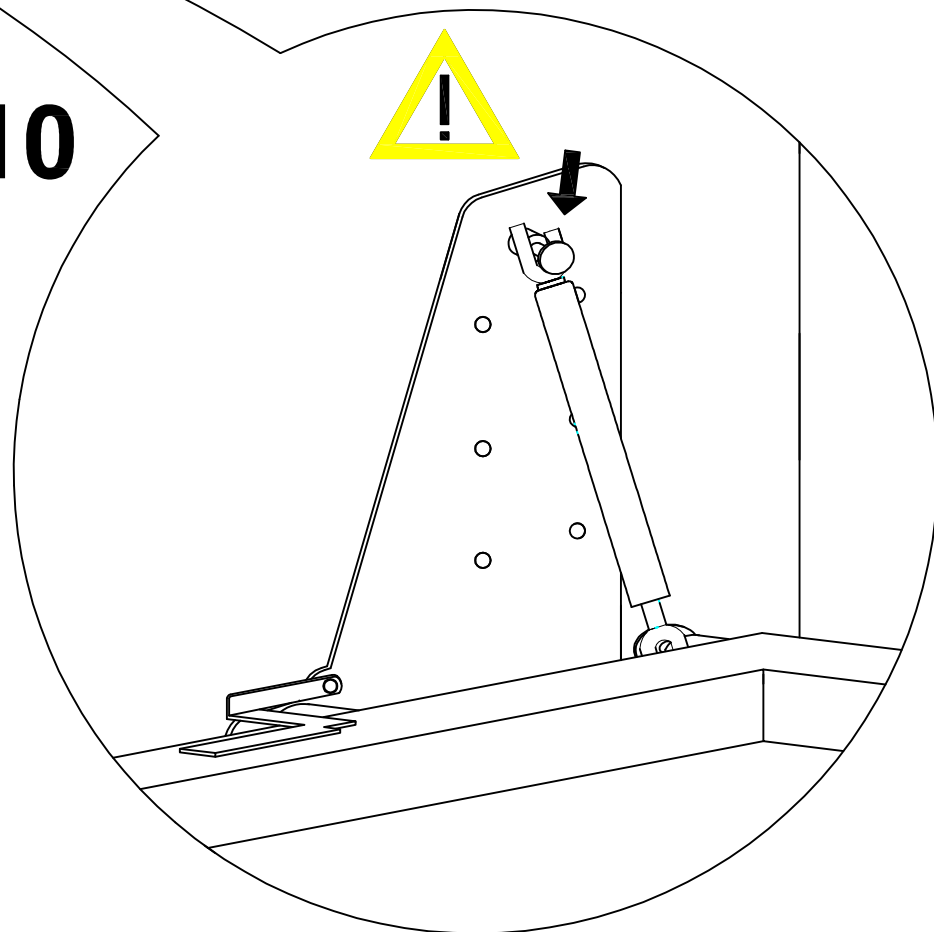



11

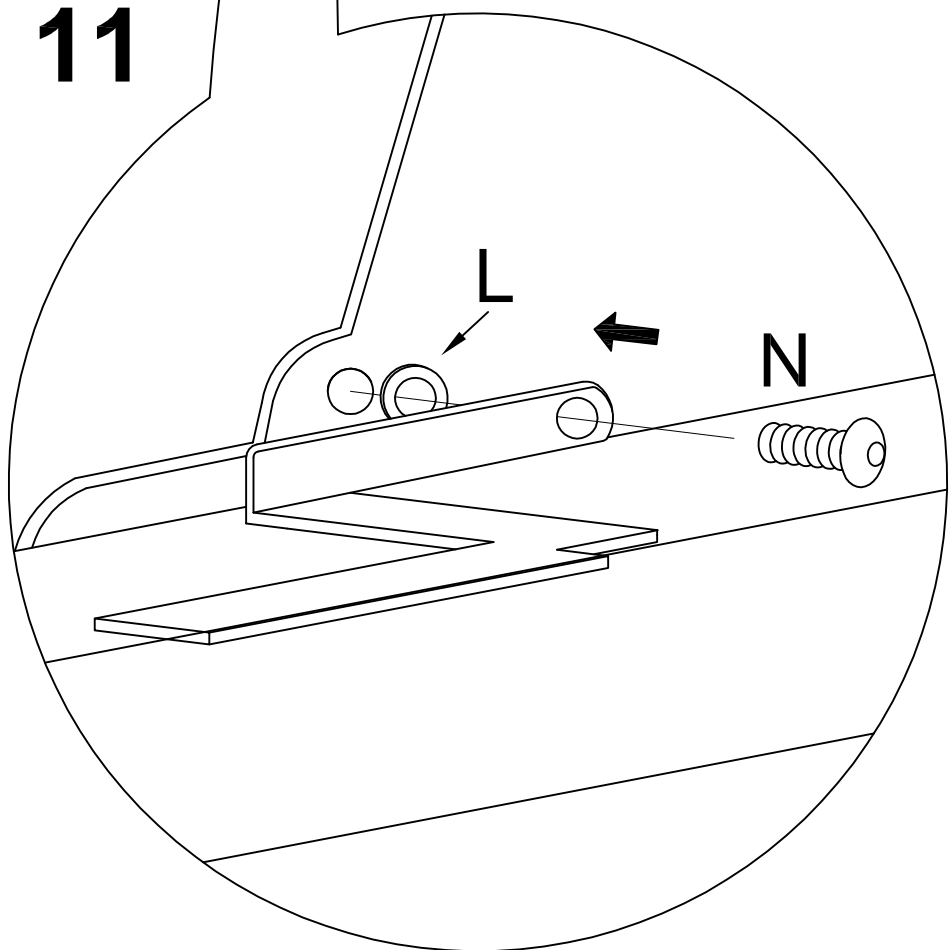


12

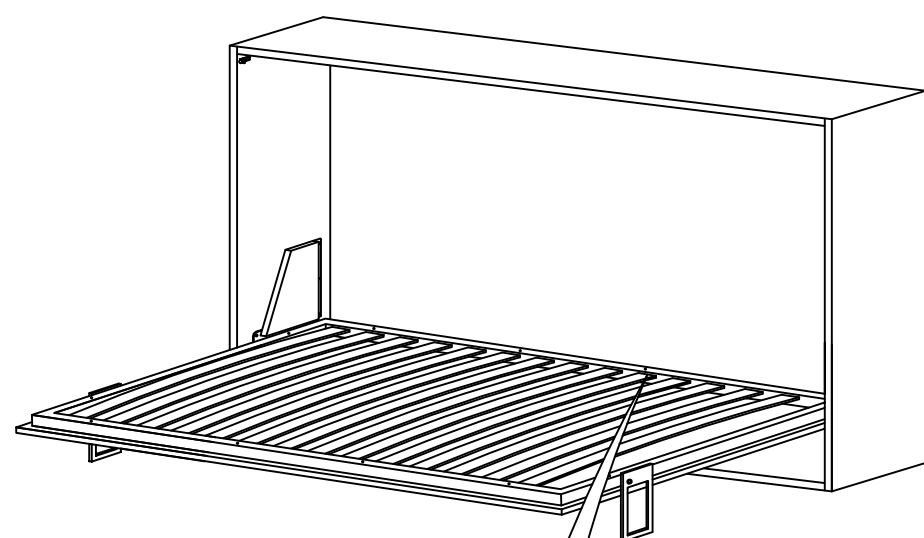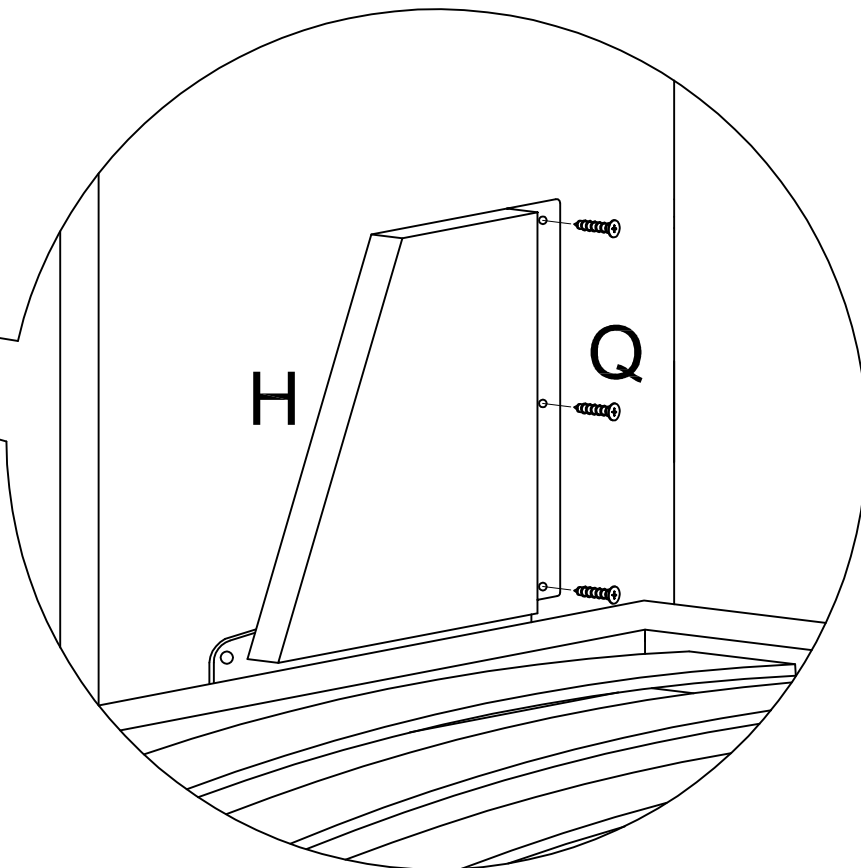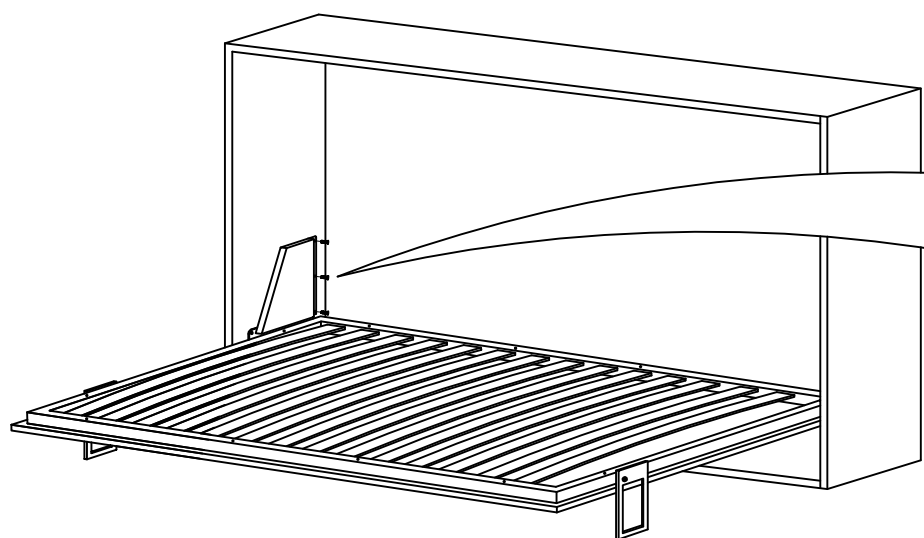

13

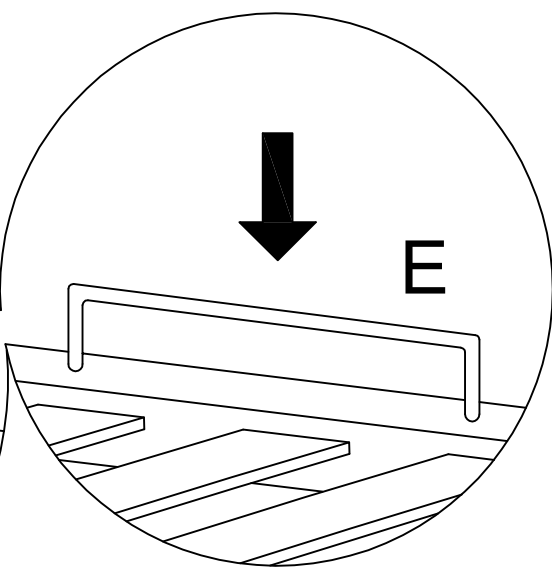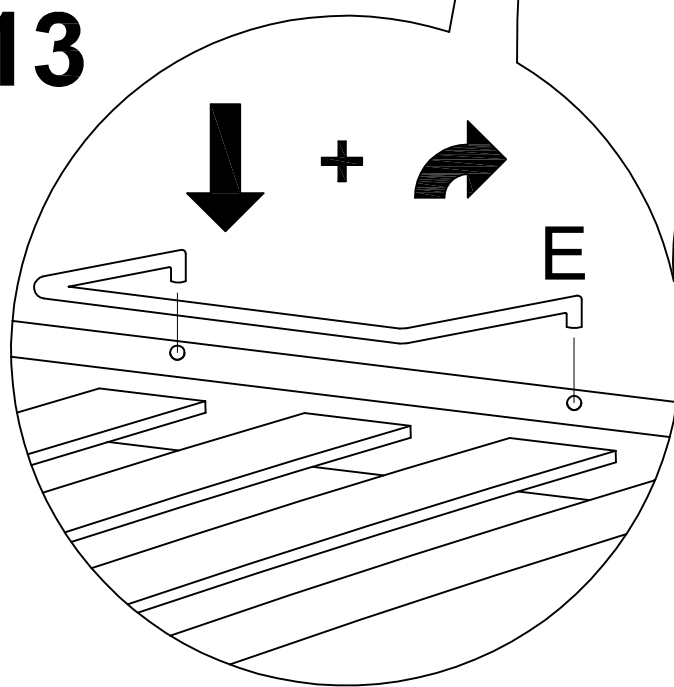


14

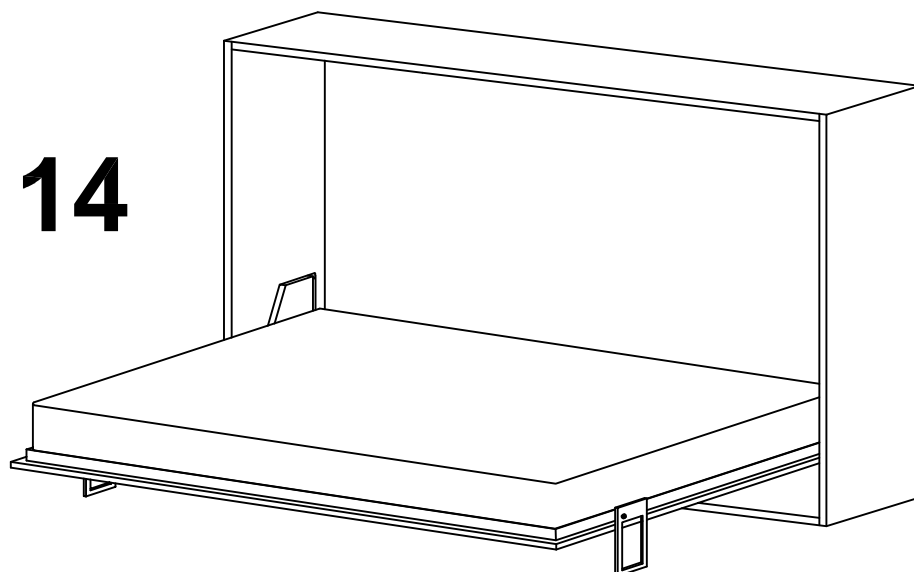


# A45 Door stop

## Montaggio / Mounting

1

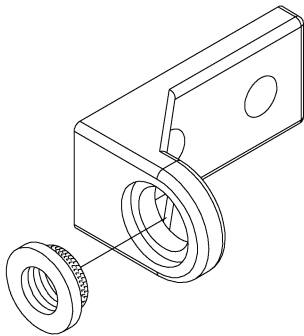


2

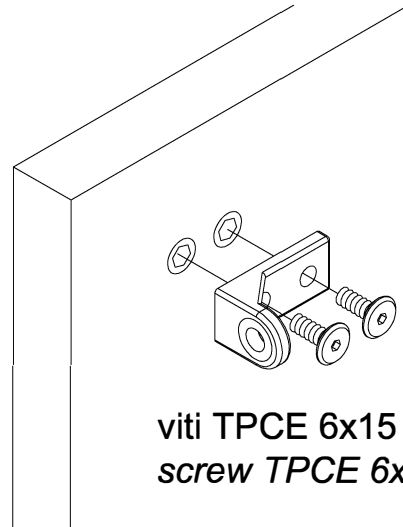


viti TPCE 6x15  
screw TPCE 6x15

3

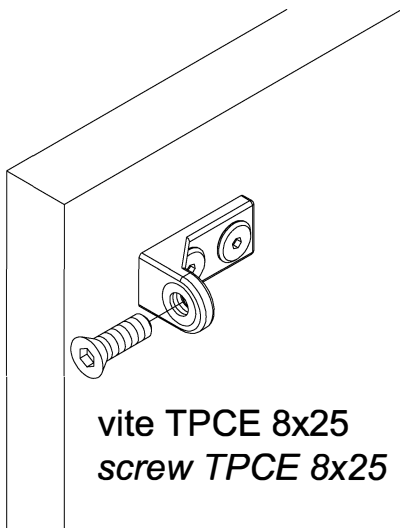


vite TPCE 8x25  
screw TPCE 8x25

4

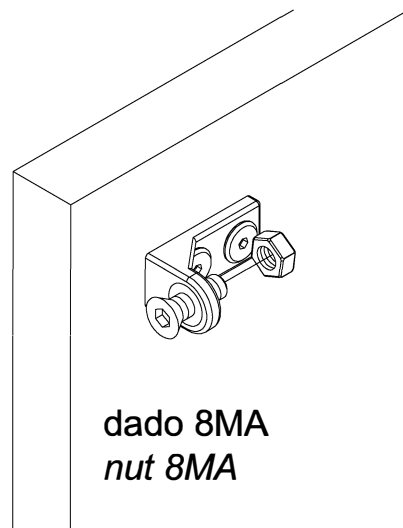


dado 8MA  
nut 8MA

5

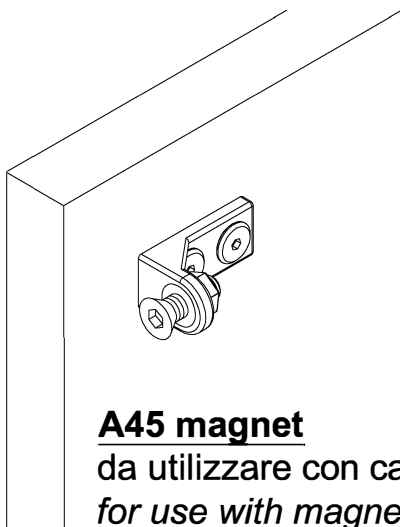

**A45 magnet**  
da utilizzare con calamita  
for use with magnet

6

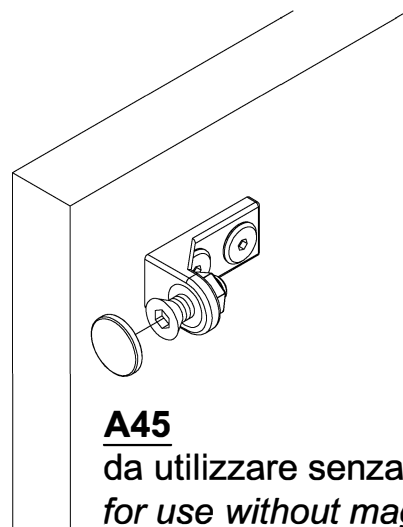


**A45**  
da utilizzare senza calamita  
for use without magnet

# A45 / A45 magnet

## Forature / Holes


Cappello mobile  
*Top panel*

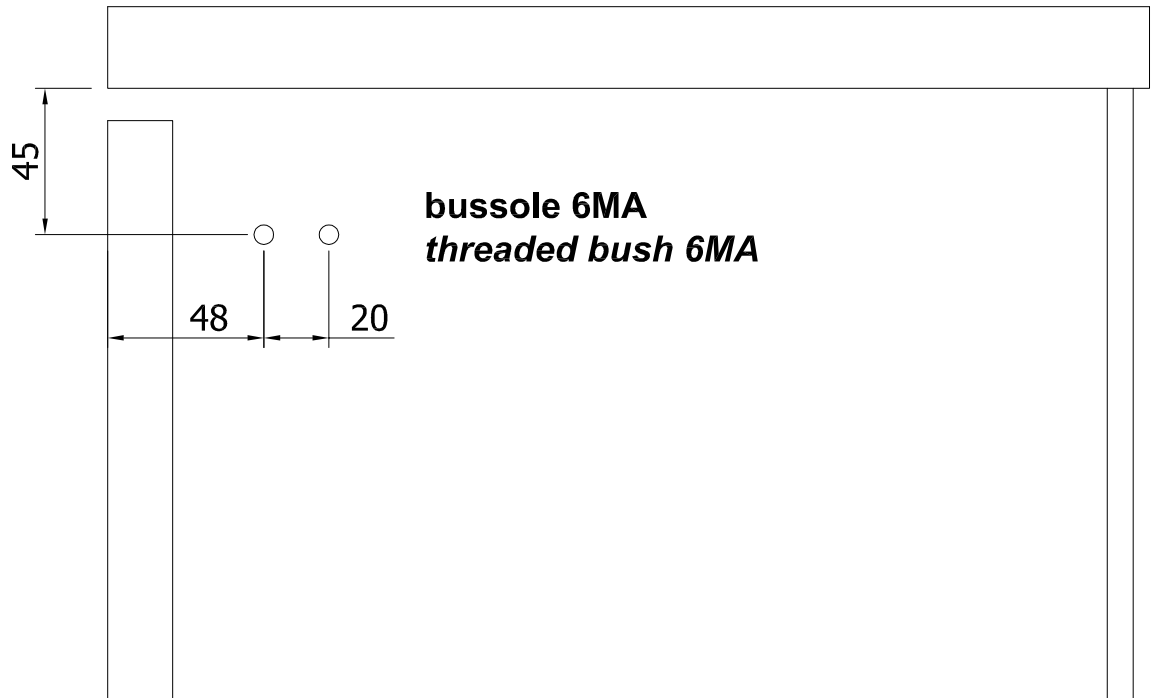



# A45 magnet

## Forature / Holes

Pediera  
*Footboard*

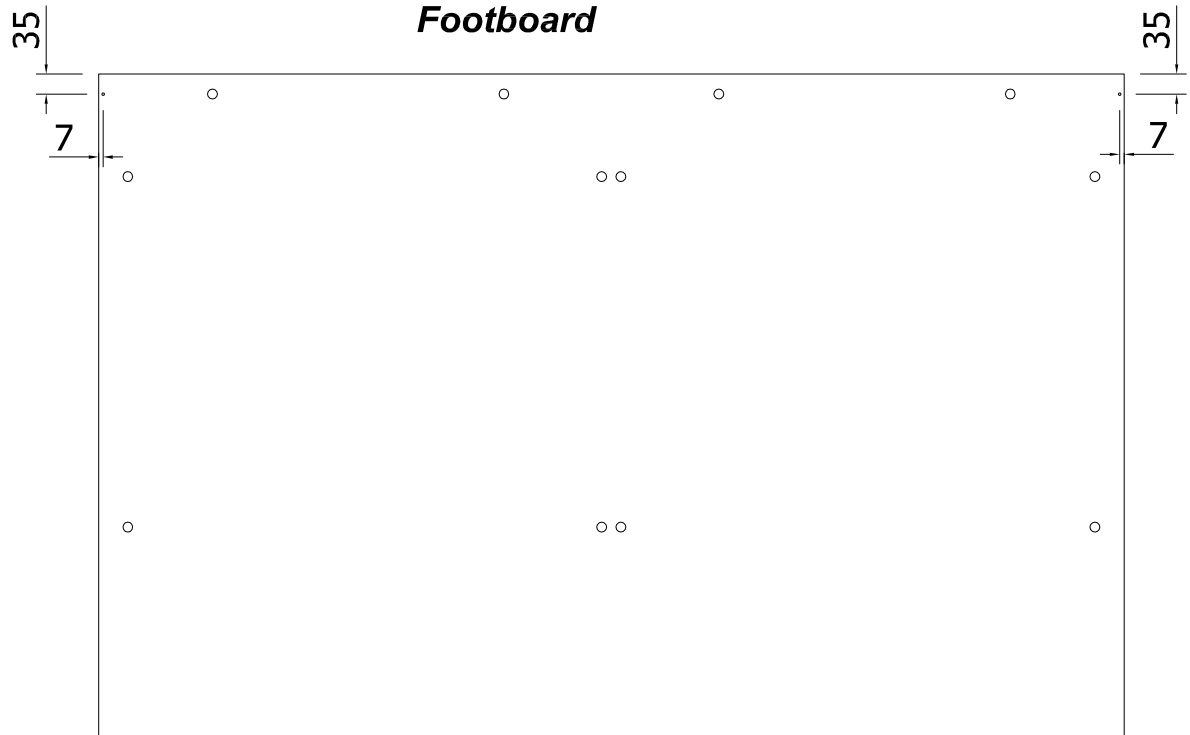

# CLICK-O LOWER 920x2020

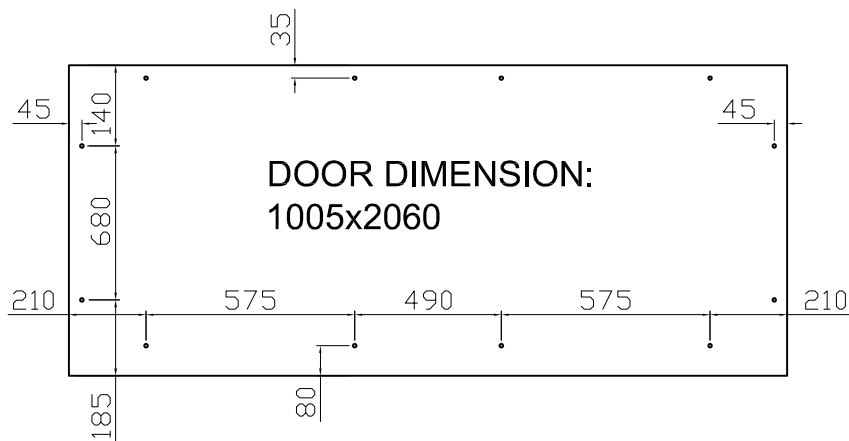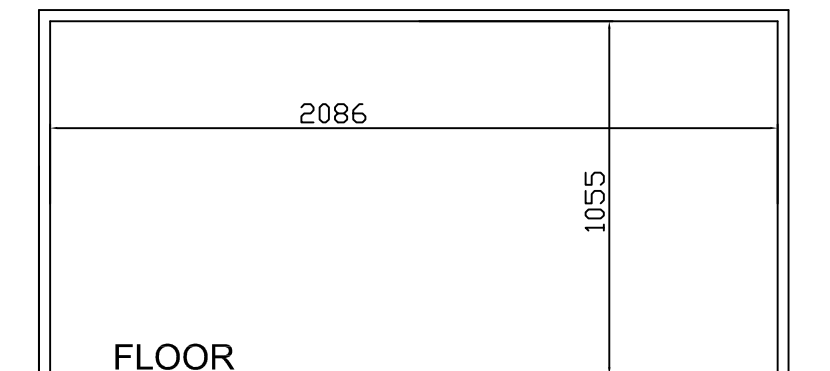

THREADED BUSH 6MA

## **CABINET DIMENSIONS:**

INTERNAL WIDE 2086mm

HEIGHT FROM THE FLOOR 1055mm

BASAMENT HEIGHT MAX 60mm

## **EXAMPLE:**

METAL BASE DIMENSION 920x2020

DOOR DIMENSION 1005x2060

BASAMENT HEIGHT 30mm

if you change basament dimension


you have to change door size

## **FRONT PANEL + MATTRESS**

**WEIGHT 40 Kg**

**HEIGHT MATTRESS 180mm**

## **HOLES FOR RIGHT AND LEFT SIDE**

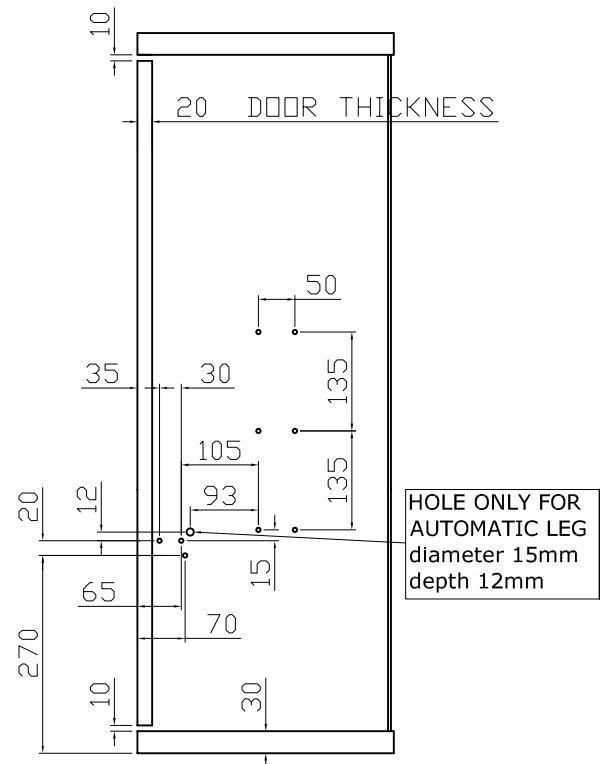


THREADED BUSH 6MA

## **DEPTH CABINET:**

**THICKNESS DOOR + 280mm +**  
**THICKNESS BACK PANEL**

If the weight of the mattress is lower than the face panel weight, the addition of a magnetic latch is advised to keep the panel well closed.

# CLICK-O LOWER 1420x2020

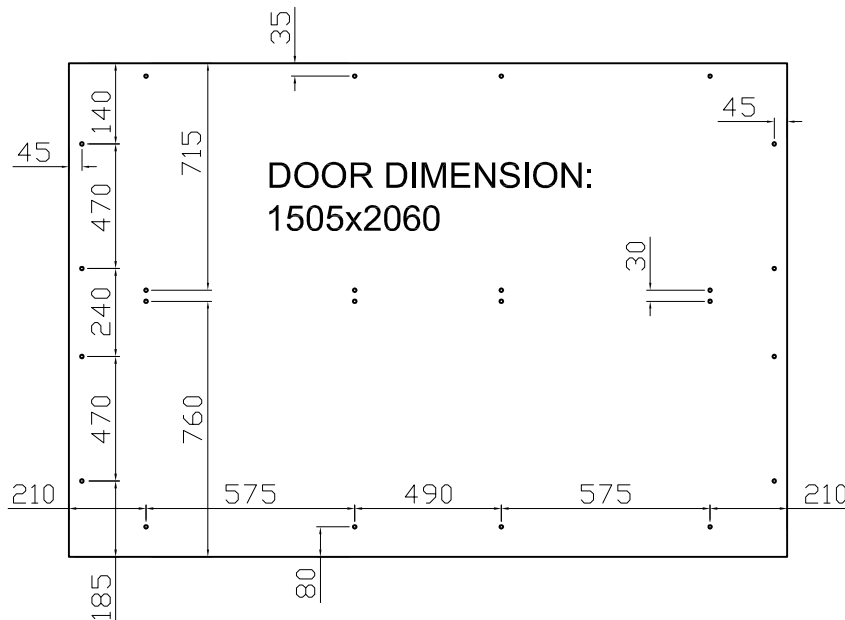

THREADED BUSH 6MA

## **CABINET DIMENSIONS:**

INTERNAL WIDE 2086mm

HEIGHT FROM THE FLOOR 1555mm

BASAMENT HEIGHT MAX 60mm

## **EXAMPLE:**


METAL BASE DIMENSION 1420x2020

DOOR DIMENSION 1505x2060

BASAMENT HEIGHT 30mm

if you change basament dimension  
you have to change door size

## HOLES FOR RIGHT AND LEFT SIDE

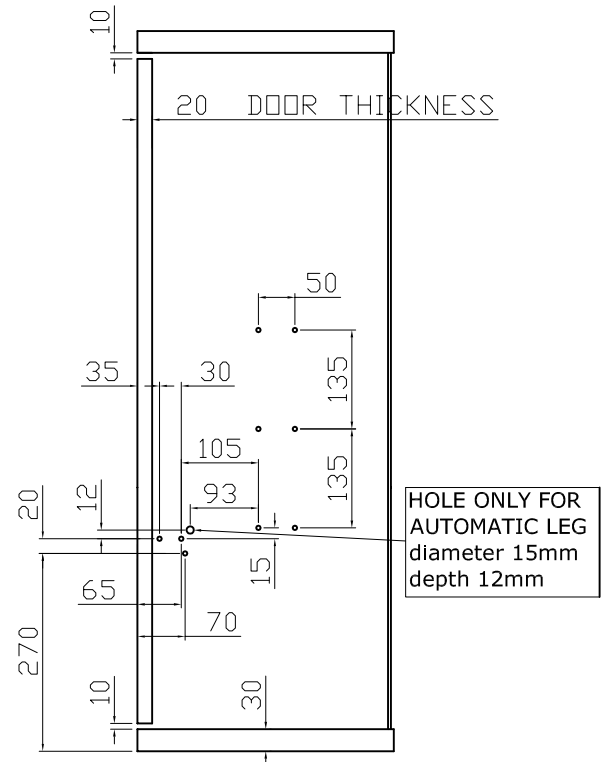

THREADED BUSH 6MA

## **DEPTH CABINET:**

**THICKNESS DOOR + 280mm +  
THICKNESS BACK PANEL**

## **FRONT PANEL + MATTRESS**



**WEIGHT 70 Kg**

**HEIGHT MATTRESS 180mm**

If the weight of the mattress is lower than the face panel weight, the addition of a magnetic latch is advised to keep the panel well closed.



# CLICK-O LOWER 1620x2020

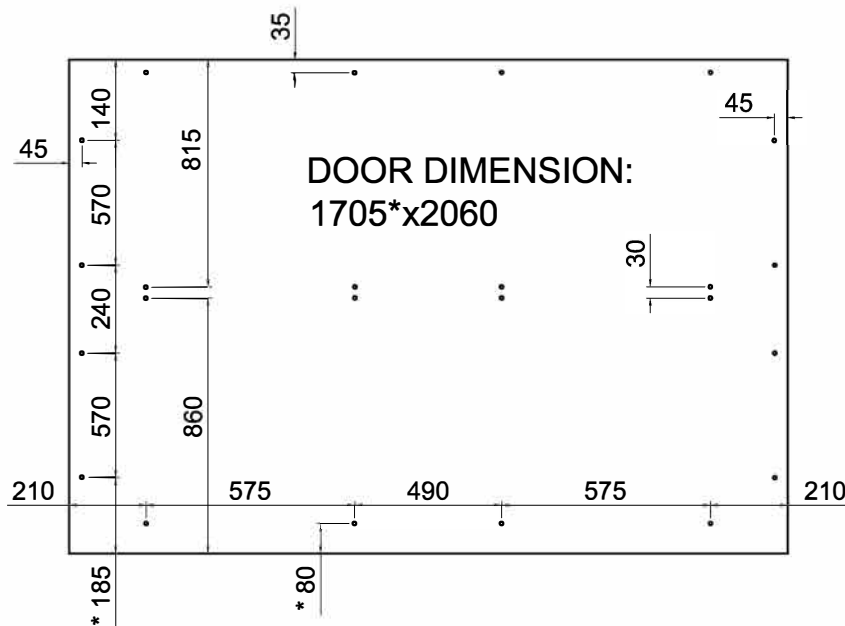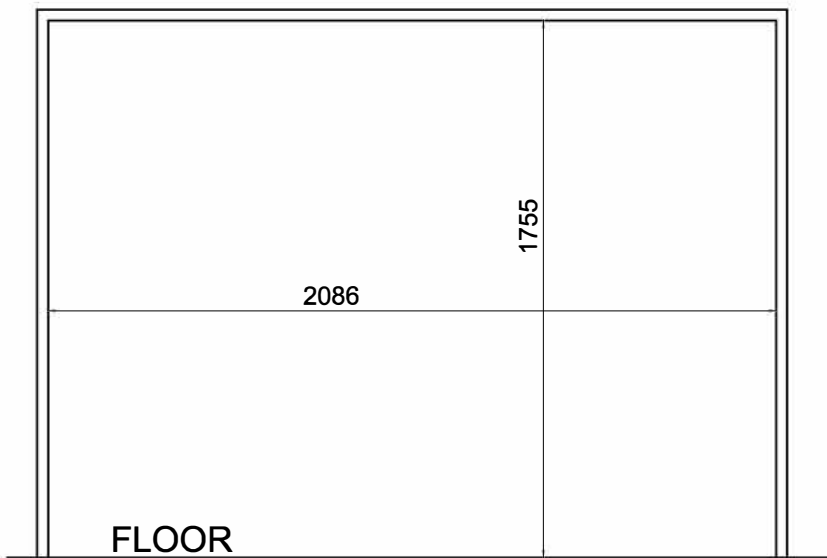

THREADED BUSH 6MA

## **CABINET DIMENSIONS:**

INTERNAL WIDE 2086mm

HEIGHT FROM THE FLOOR 1755mm

BASAMENT HEIGHT MAX 60mm

## **EXAMPLE:**

METAL BASE DIMENSION 1620x2020

DOOR DIMENSION 1705x2060


BASAMENT HEIGHT 30mm =

base 25mm + adjustable feet 5mm

if you change basament dimension

you have to change door size and holes (\*)

## HOLES FOR RIGHT AND LEFT SIDE

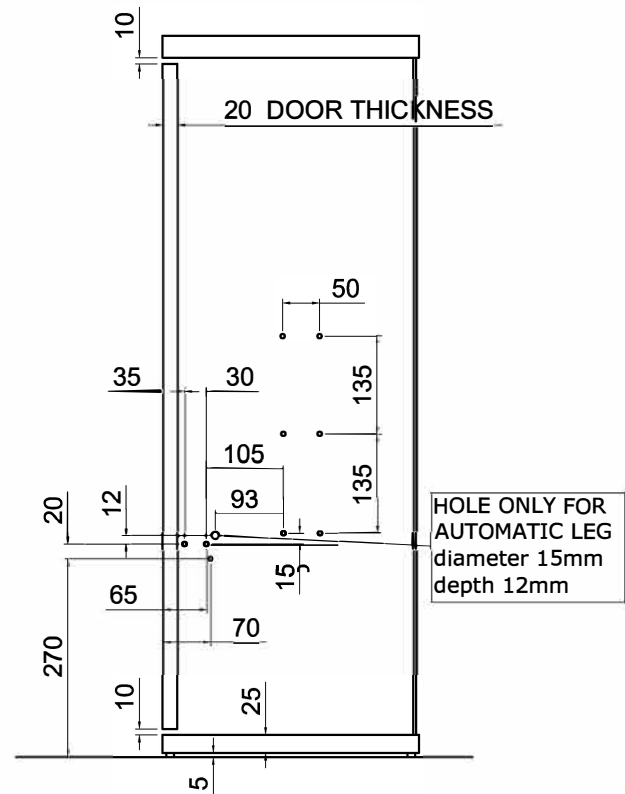

THREADED BUSH 6MA

## DEPTH CABINET:

THICKNESS DOOR + 280mm +  
THICKNESS BACK PANEL

## FRONT PANEL + MATTRESS

WEIGHT 75 Kg

HEIGHT MATTRESS 180mm