


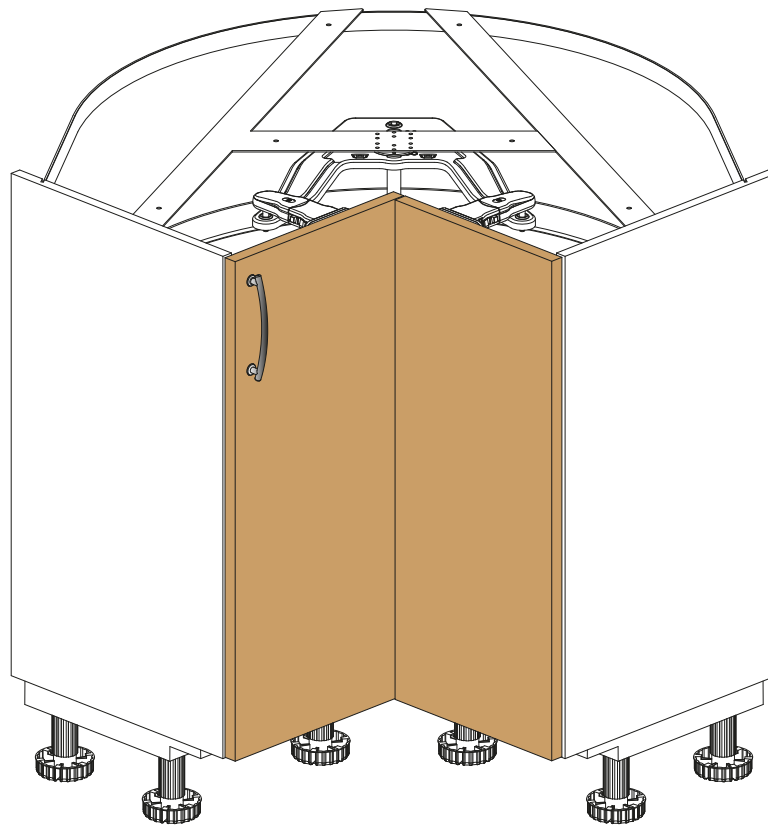


# Montageanleitung Mounting Instruction Instructions de montage Istruzioni di montaggio


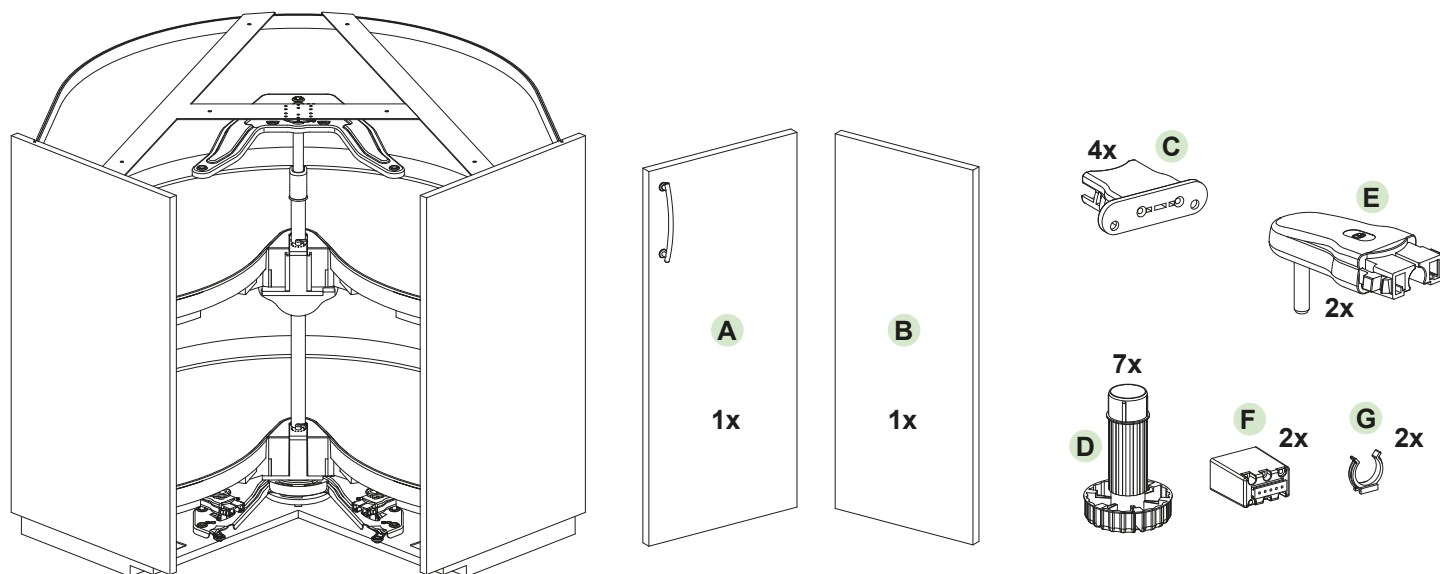


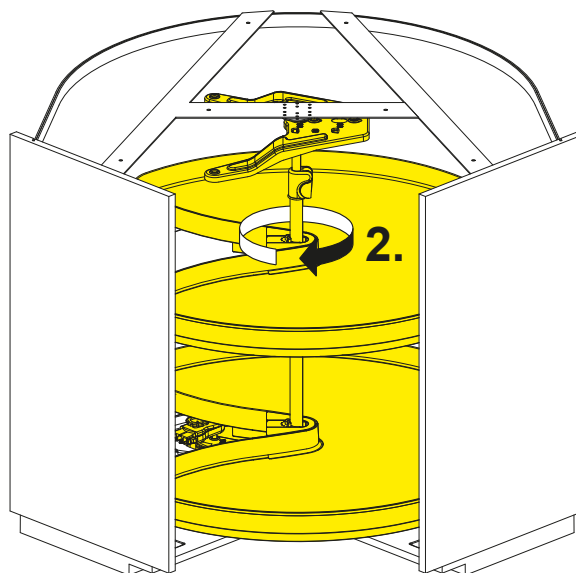




**1**

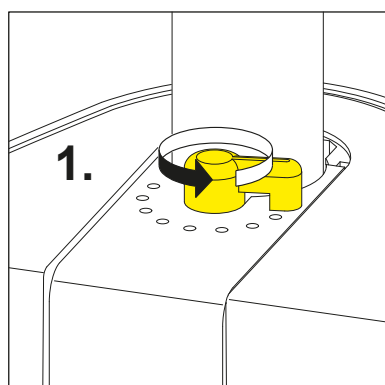



**2**

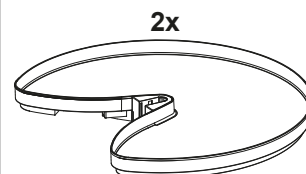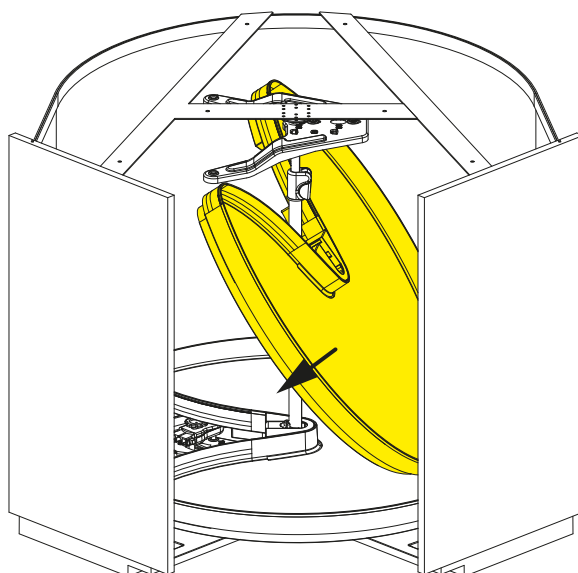







3

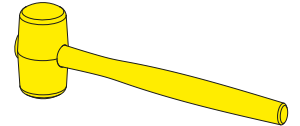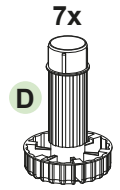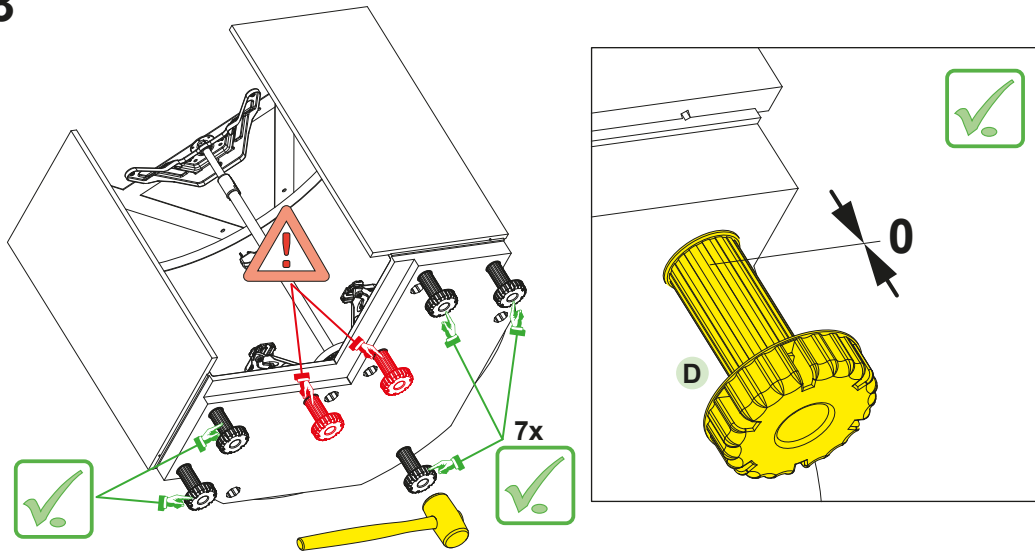





4

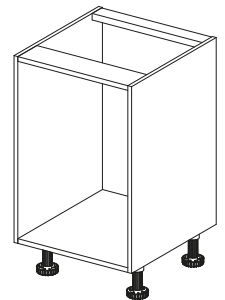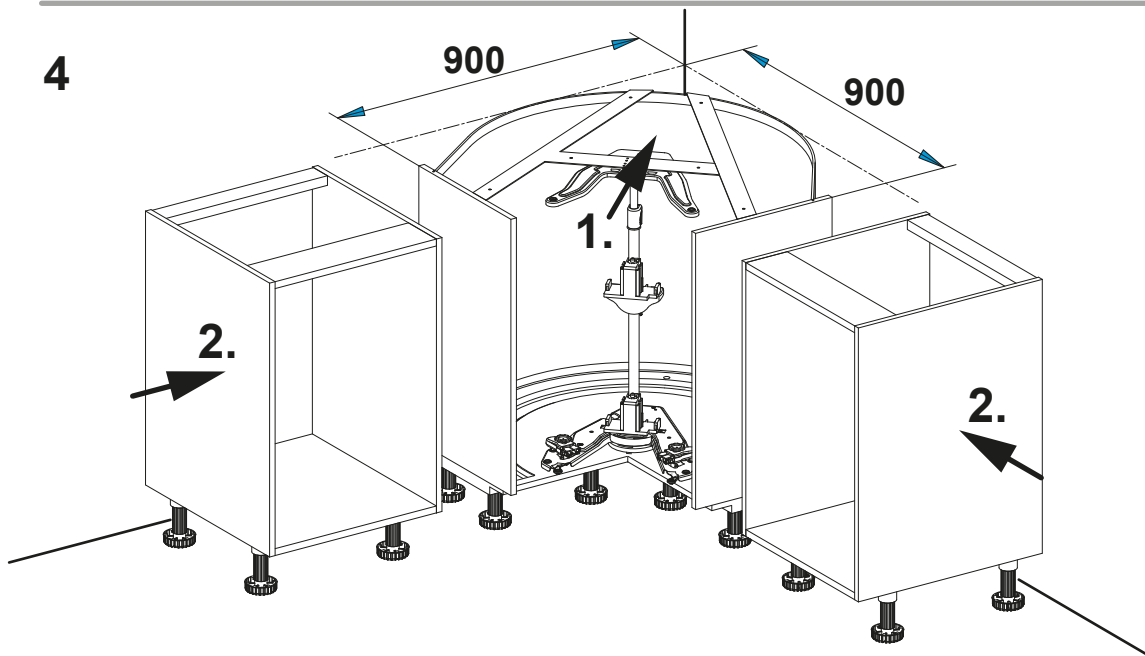




5

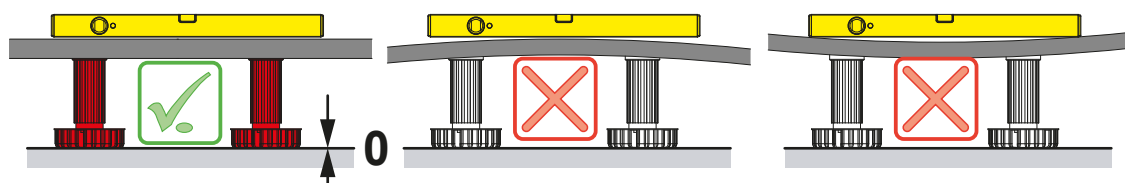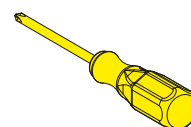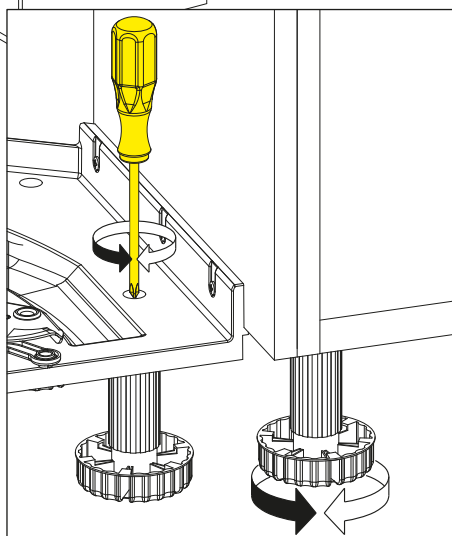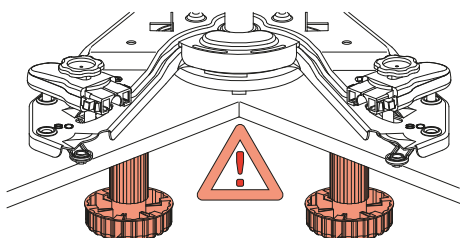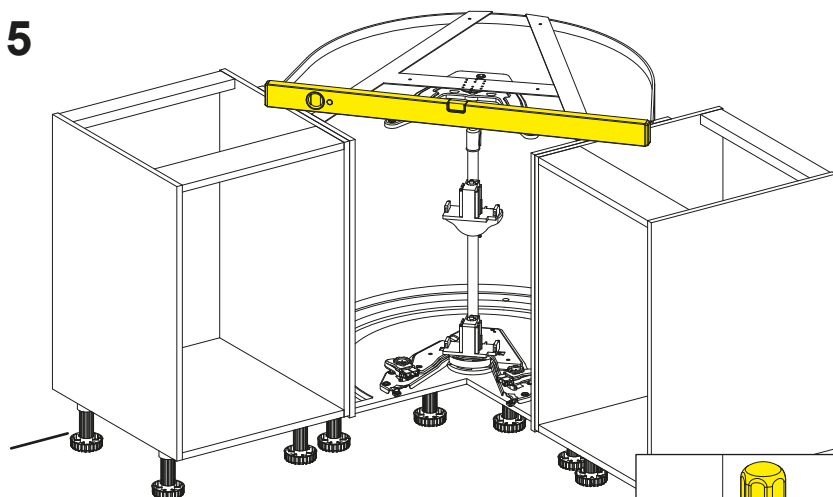


6

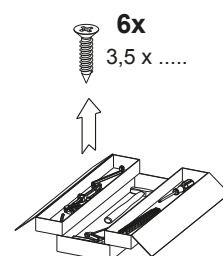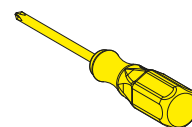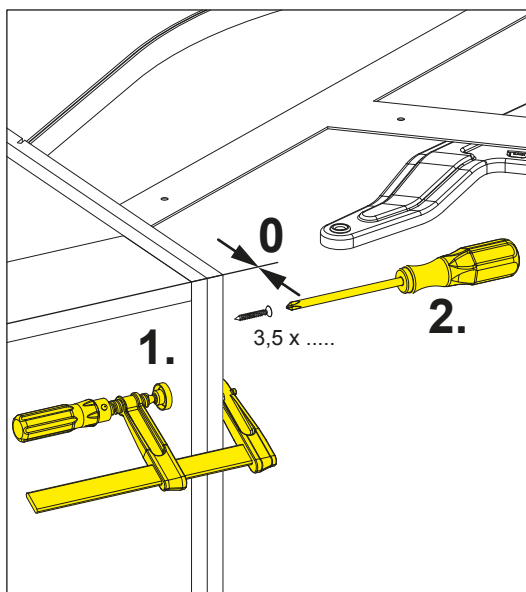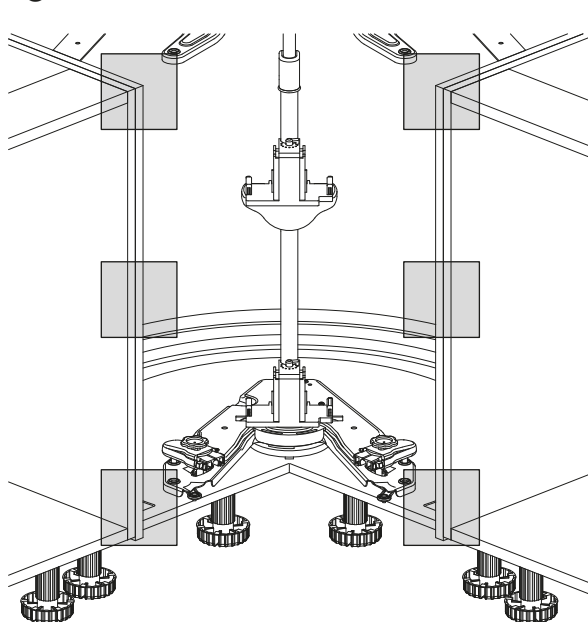


7

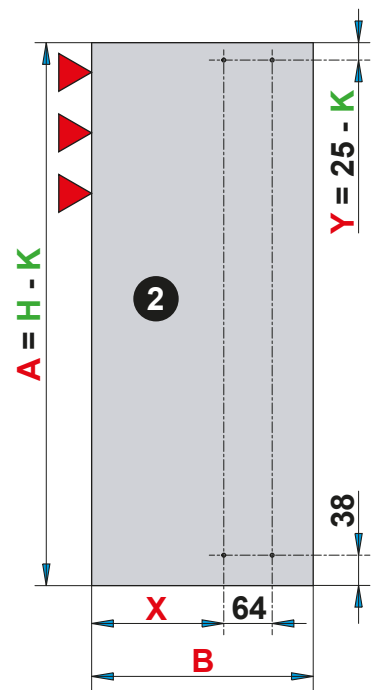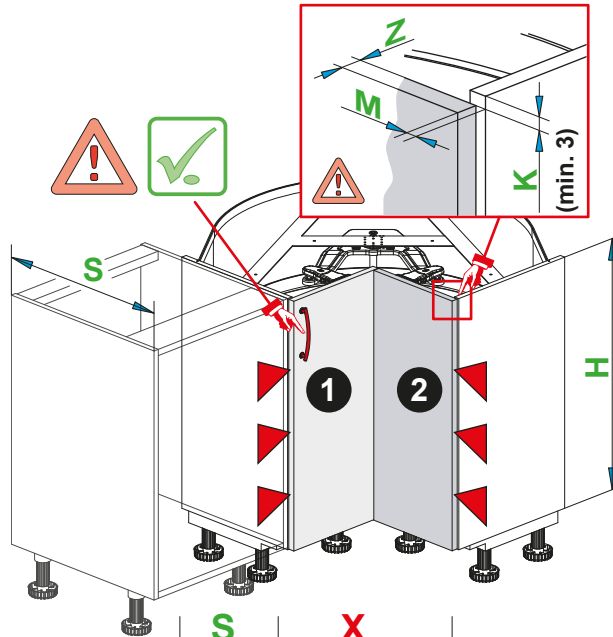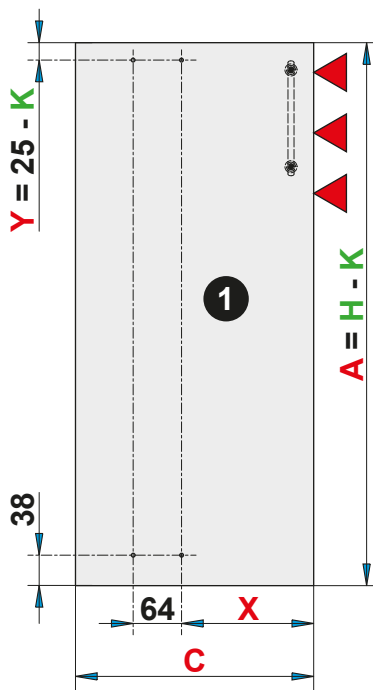


S	X
550	193,5 - M
555	188,5 - M
560	183,5 - M
565	178,5 - M
570	178,5 - M
575	178,5 - M
580	178,5 - M

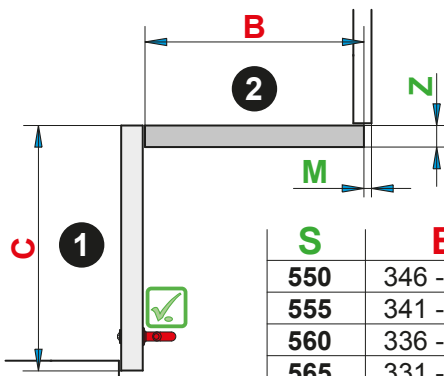


S	B	C
550	346 - M - Z	348 - M
555	341 - M - Z	343 - M
560	336 - M - Z	338 - M
565	331 - M - Z	333 - M
570	326 - M - Z	328 - M
575	321 - M - Z	323 - M
580	316 - M - Z	318 - M

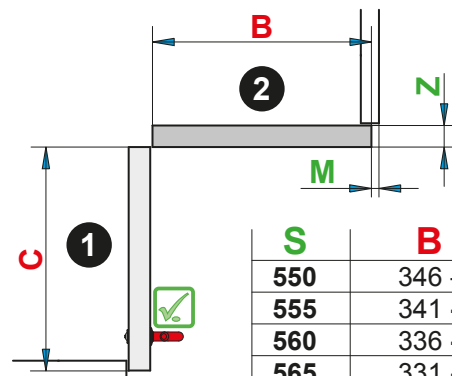

S	B = C
550	346 - M - Z
555	341 - M - Z
560	336 - M - Z
565	331 - M - Z
570	326 - M - Z
575	321 - M - Z
580	316 - M - Z


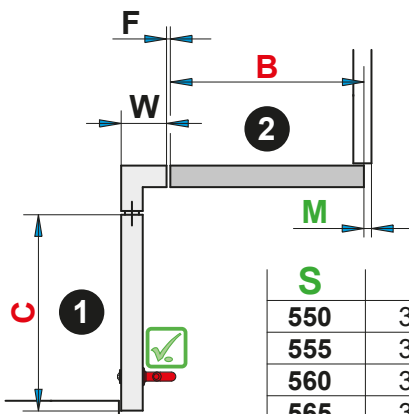


S	B = C
550	348 - F - M - W
555	343 - F - M - W
560	338 - F - M - W
565	333 - F - M - W
570	328 - F - M - W
575	323 - F - M - W
580	318 - F - M - W




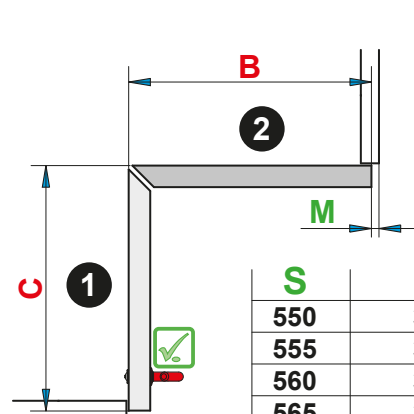


S	B = C
550	346 - M
555	341 - M
560	336 - M
565	331 - M
570	326 - M
575	321 - M
580	316 - M






8

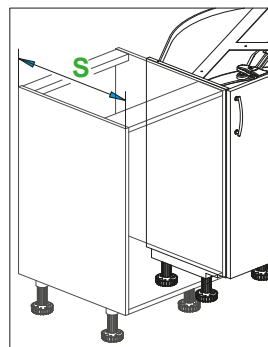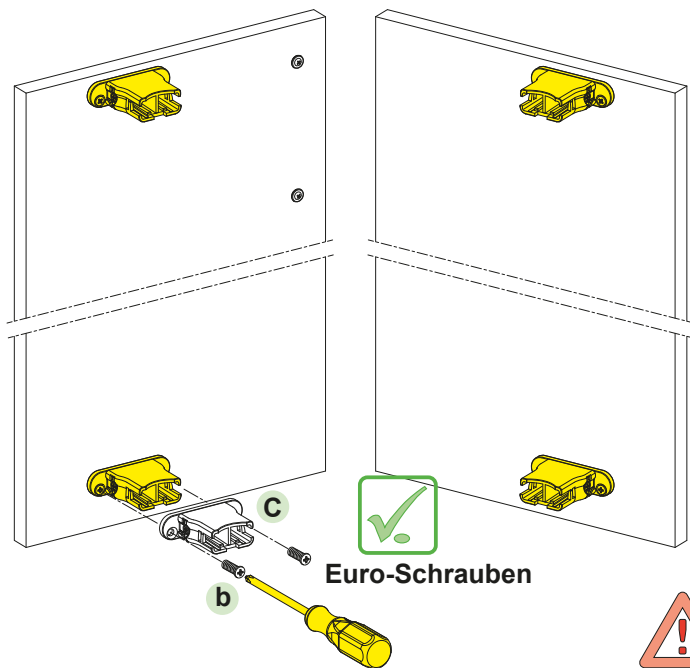











S		
550		✓
555		✓
560		✓
565		✓
570	X = 5	✓
575	X = 10	✓
580	X = 15	✓

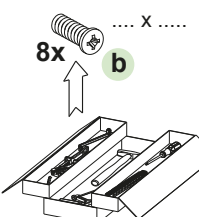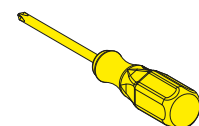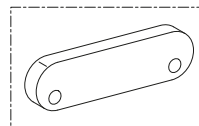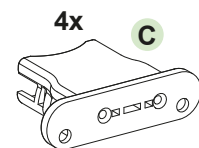

9

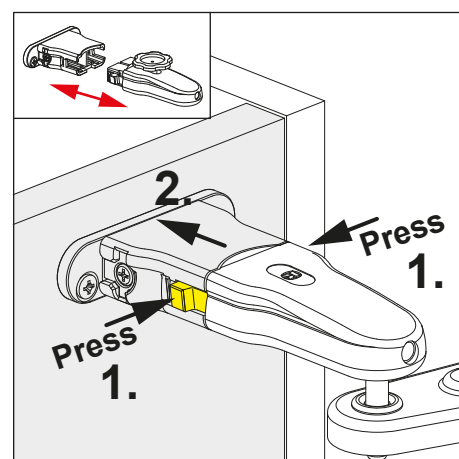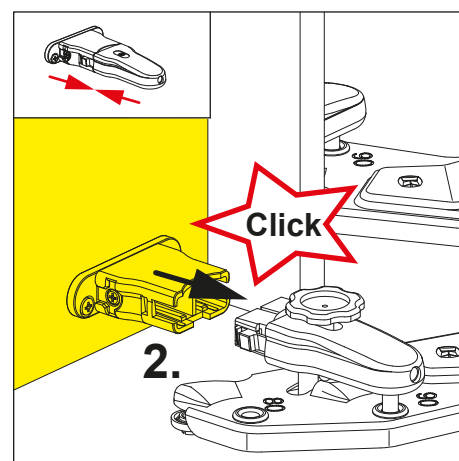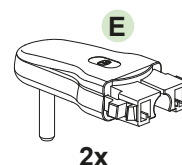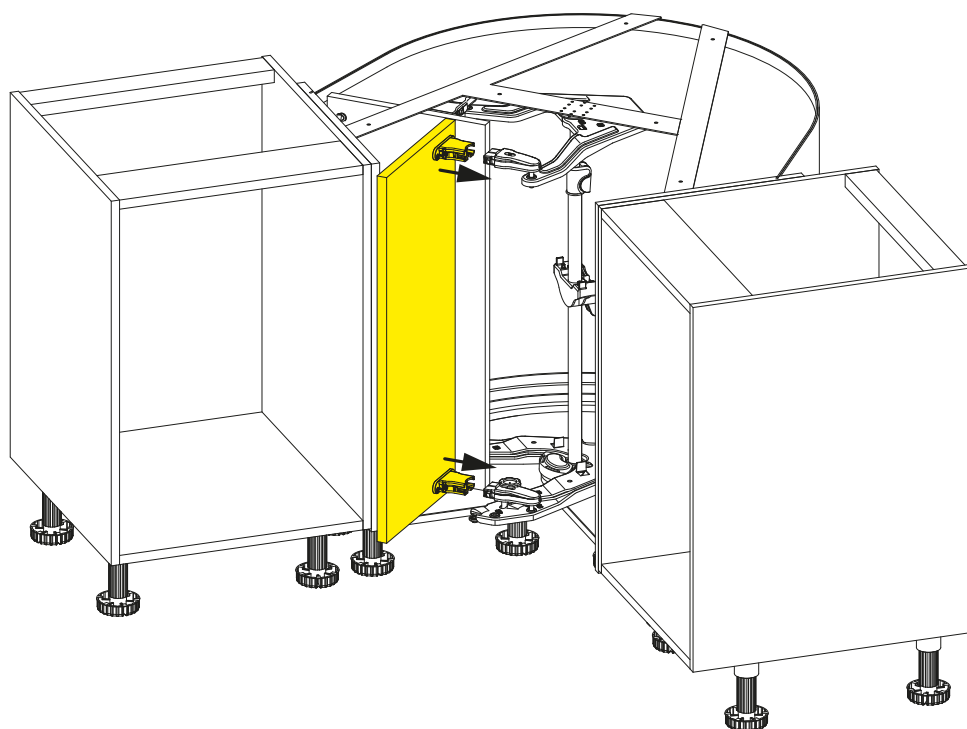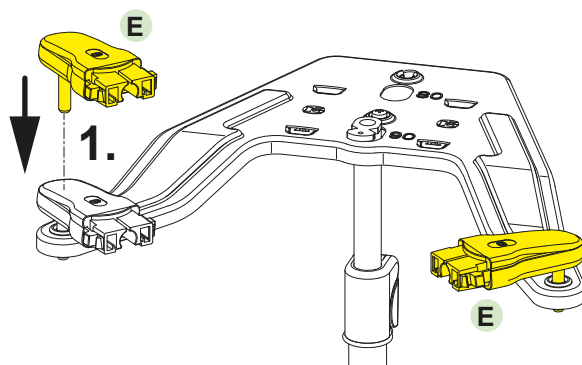


10

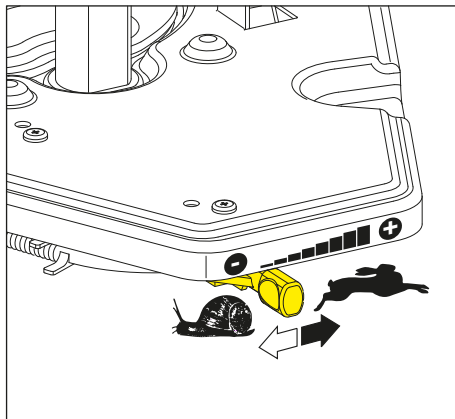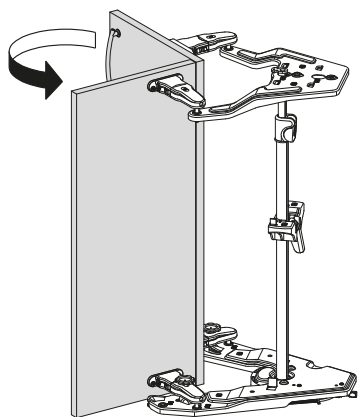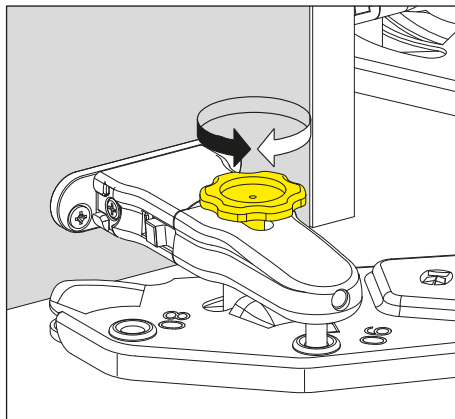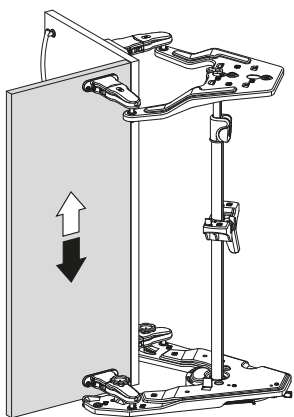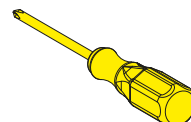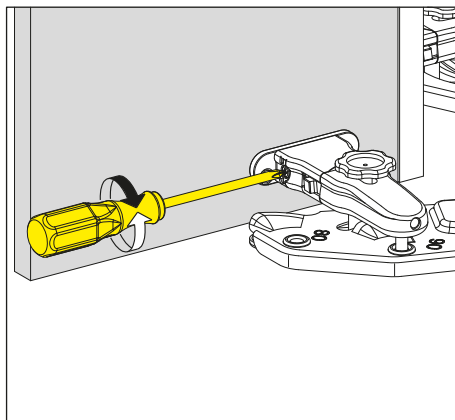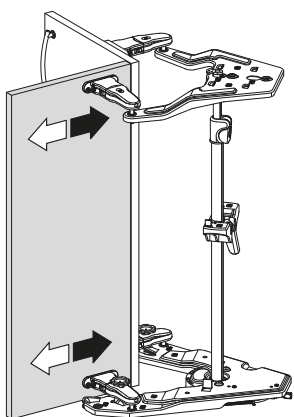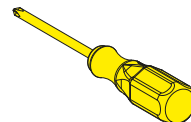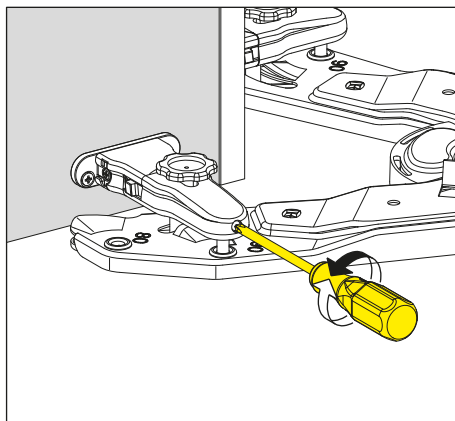
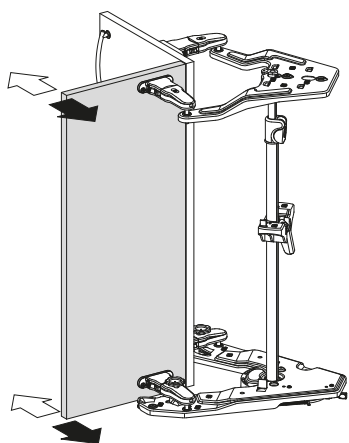








11

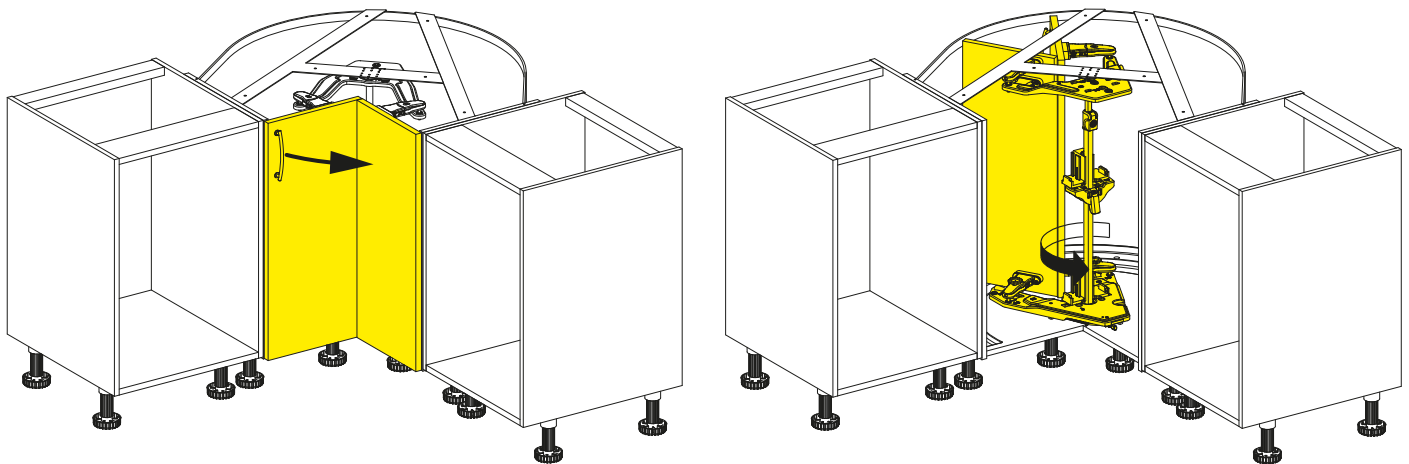



12

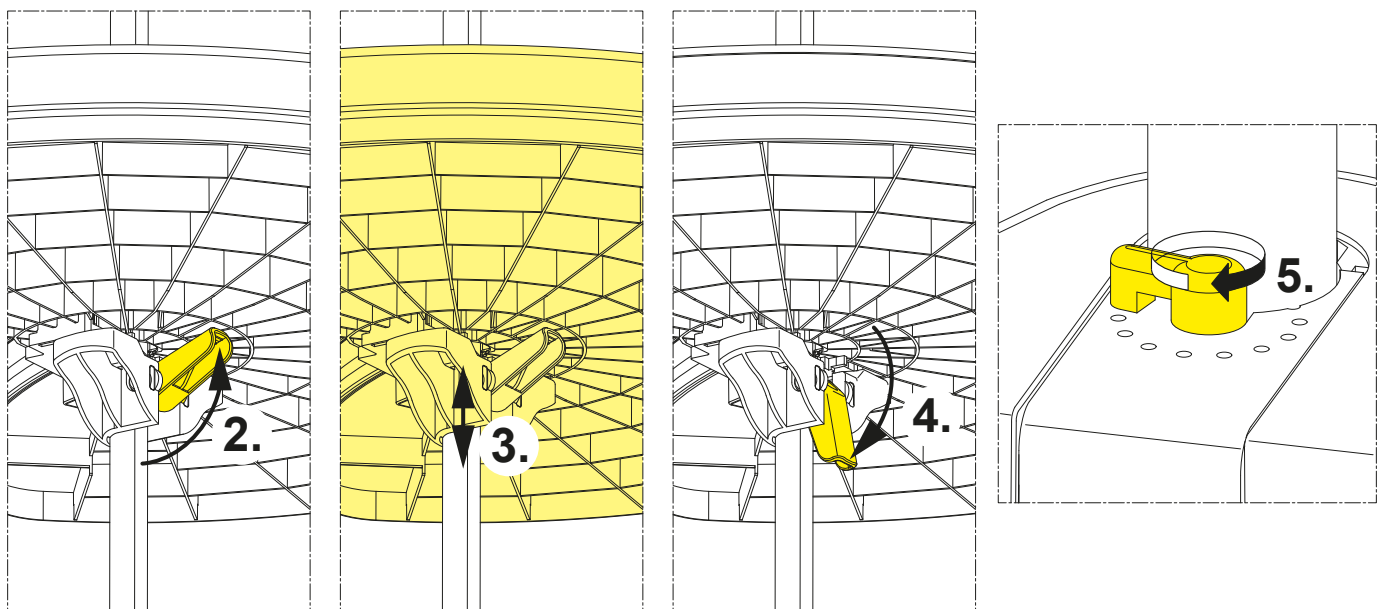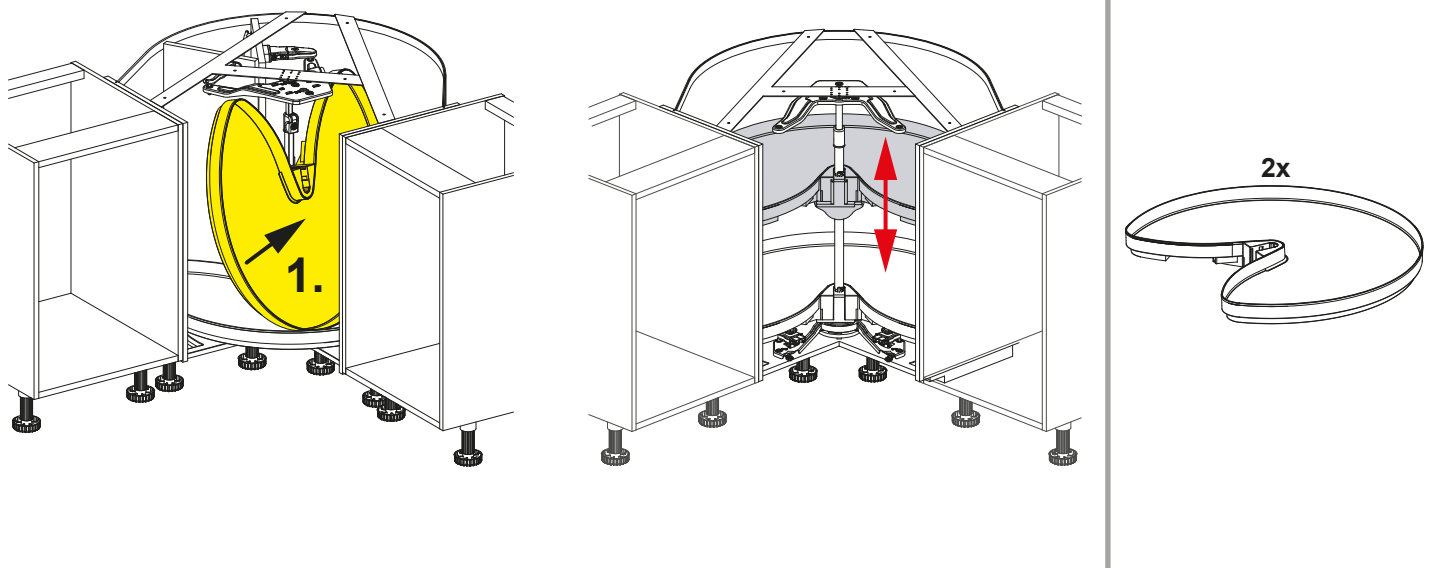



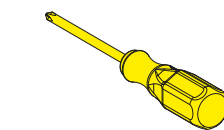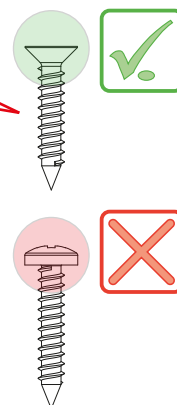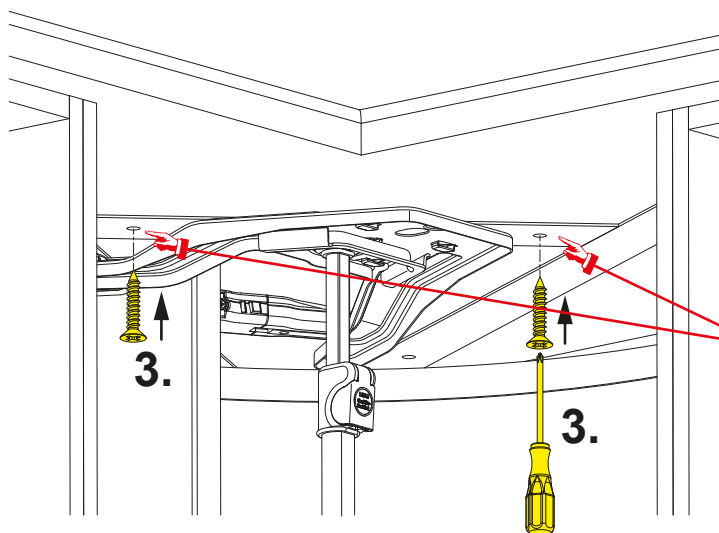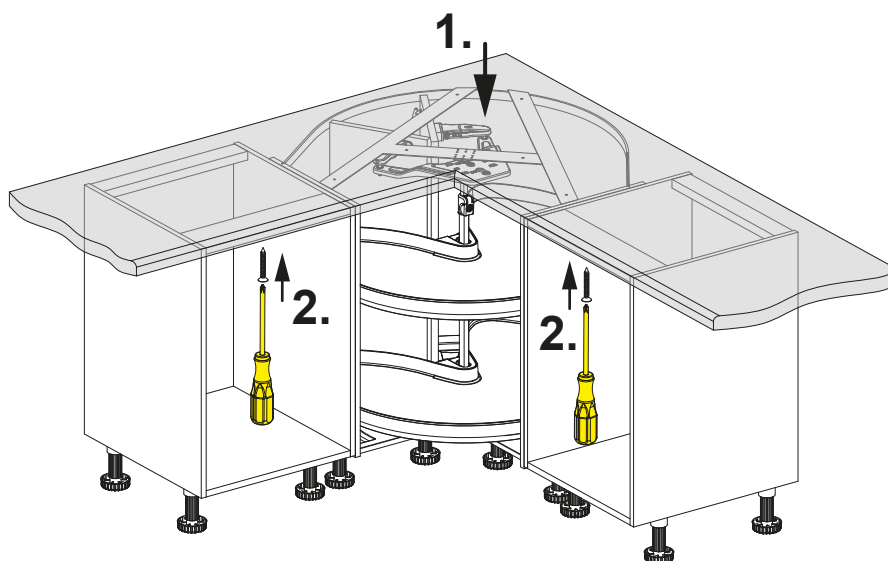

min. 2x  
3,5 x .....

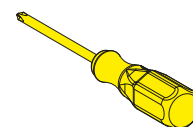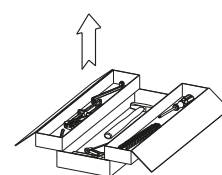

3,5 x .....

