
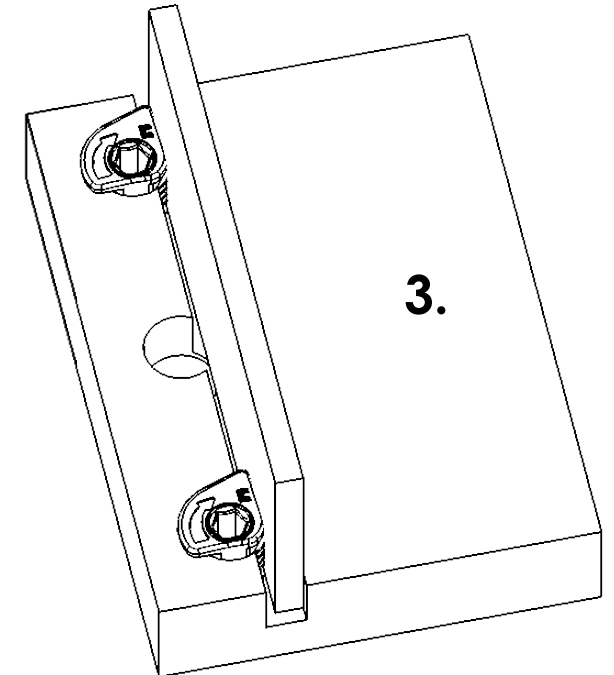
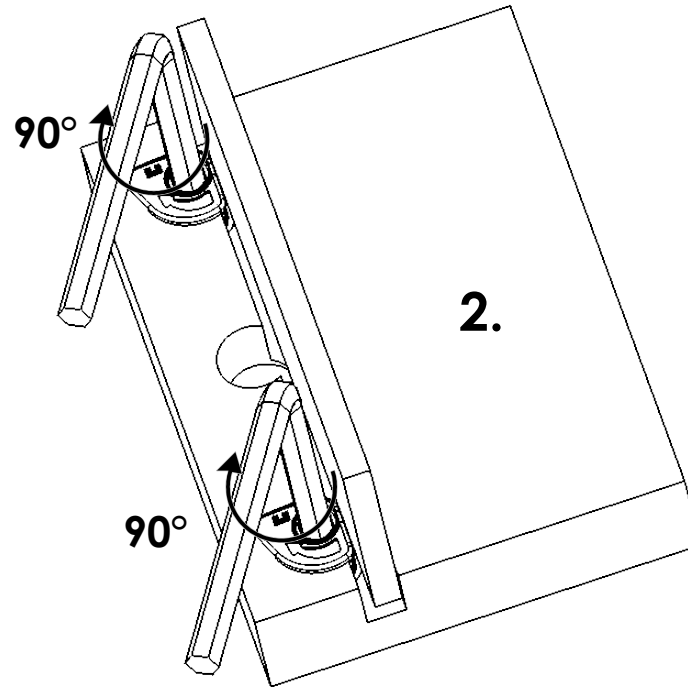


ASSEMBLING INSTRUCTIONS

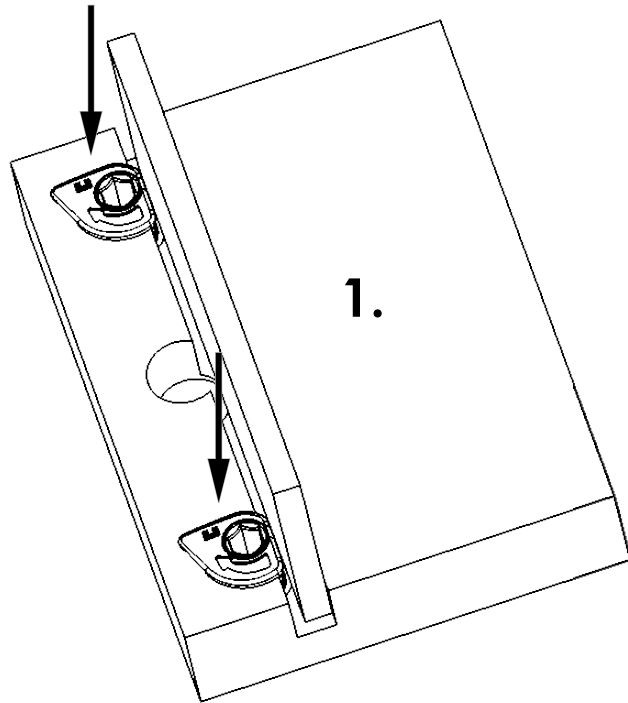

1. Insert the back in its assigned hole, before or after positioning the backrest.

2. Make a clockwise rotation of maximum 90° with a 4 mm hex key to fix the back stopper.

3. This is the final position of the back stopper when the assembly is done.