



OrgaAer

Assembly Instructions


Filing Frame and Wide Drawer

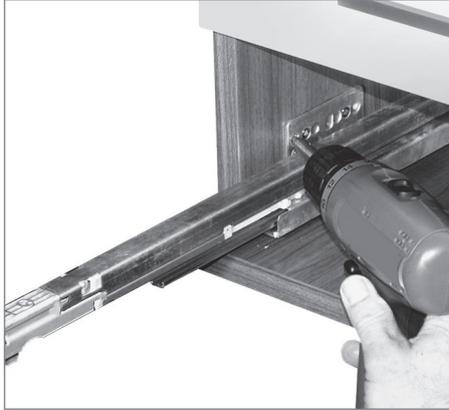


1. Fix the full extensions on the right and the left (provide for at least 2 drillings for each strap).

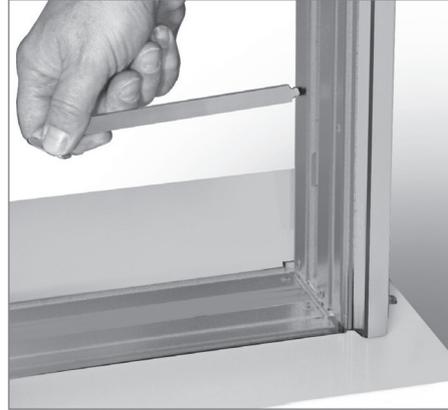

3. Suspend the front panel braces in the opening of the inner surface of the shroud element on the left and the right side.

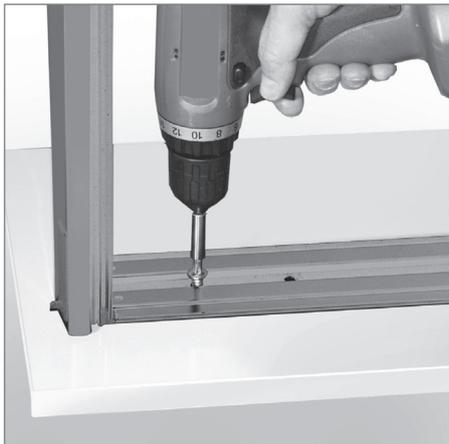

2. Fasten the front panels.

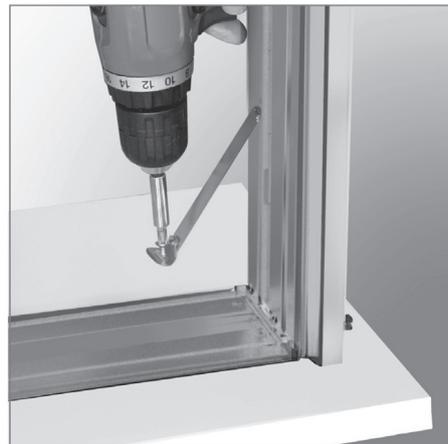

4. Align the front panel and attach the front panel brace to the inner surface of the front panel.

5. Place the filing frame or the wide drawer on the full extensions and push it all the way to the stop.

