

Installation instructions PowerQUAD

with 3 Schuko sockets and 2 USB charging sockets or 4 Schuko sockets

Voltage: 230V/50-60Hz
Power: Sockets max. 16A/3500W
USB charger 5VDC, max. 2.1A

the charging function usb-charger can not be guaranteed in any case due to a multitude of providers and equipment

Suitable for retrofitting on the worktop.

Be aware of sharp edges - these may cause injury!

Caution!

The installation must only be carried out by a qualified engineer in compliance with the relevant regulations!
Installation must only be carried out when disconnected from the power supply!
The PowerQuad is only intended for dry, enclosed rooms.
(e.g. kitchens)
Only use for the intended purpose.


Replace defective housing and mounting parts only with original spare parts.

Observe the maximum power of the components!




Any non-compliance will render the manufacturer's warranty null and void.

Installation:

1. After removing the lower cover (A), the lower mounting hole and the cable outlet are visible.
2. Depending on the desired cable routing, drill a hole for the connection cable (B).
3. Use the supplied metal template (C) to mark the mounting holes in the desired position and pre-drill if necessary. Use suitable mounting material depending on the existing surface.
The metal template (C) can now be fastened with both upper screws (D), so that it can only be removed again with difficulty.

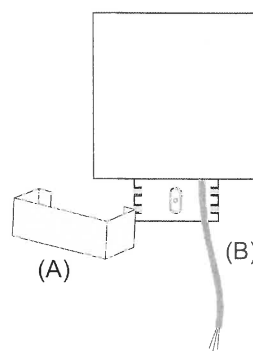

Metal template (C)

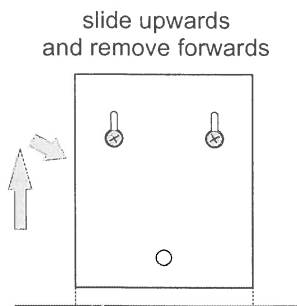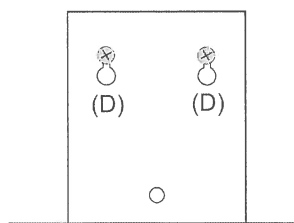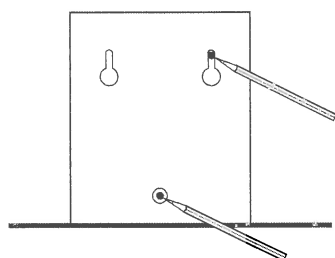

After removing the drilling template the POWER-Quad can be installed.

Please turn




Subject to technical changes


Art. no.: 51.030.003.0046

Version: 05_2014
Mont_Power_Quad_3Schuko_2USB


4. Put the PowerQuad's keyholes onto the screws then slide it downwards until the limit stop.
Please make sure that the connection cable is not kinked or damaged.
5. The PowerQuad can now be fastened with the lower screw (E).

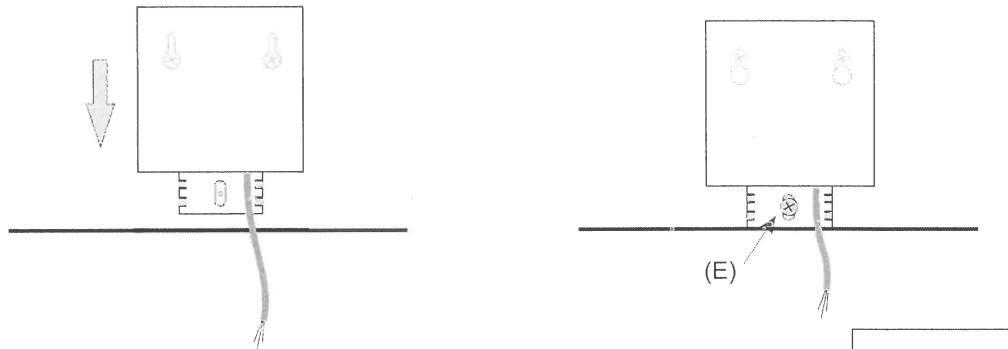

6. Now the lower cover (A) can be attached again.
For this, place the cover onto the brackets on one side and then press the opposite side until it snaps into place.

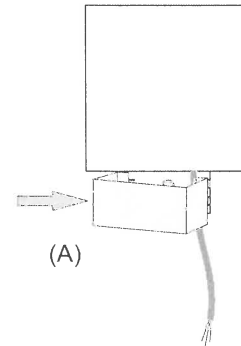

7. Now install the supplied Schuko socket in accordance with regulations and the PowerQuad is ready for operation.

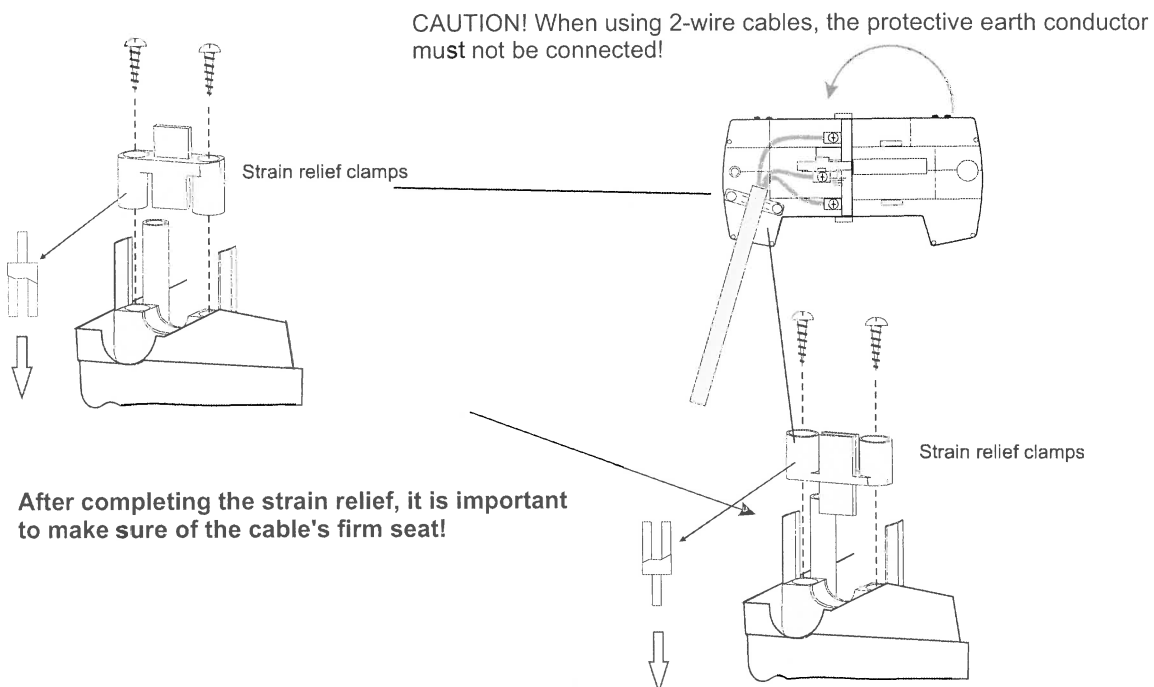

The original cable must not be extended or damaged. If a change still has to be made, this should be carried out by trained personnel in accordance with the applicable VDE regulations



Do not use acidic joint fillers or sealants!

Please note: To prevent damage to the surface, avoid using abrasive cleaning agents or scourers at all times!
Only use cleaning agents which are suitable for stainless steel.
This is a handcrafted product. The surface can therefore have different shades.

Subject to technical changes